



| Original  | Substitut | Original  | Substitut                     |
|---|-----------|---|-------------------------------|
|    | Power     |    | Power                         |
|    | Mute      |    | Mute / Dimmer                 |
|    | Red       |    | Red / Netflix / Search        |
|    | Green     |    | Green / APP / Repeat          |
|    | Yellow    |    | Yellow / YouTube / Repeat     |
|    | Blue      |    | Blue / Prime Video / Random   |
|    | <</[≡o]   |    | << / Tune-                    |
|    | >>/[≡?]   |    | >> / Tune+                    |
|    | I<</[≡+]  |    | I<< / Preset-                 |
|   | >>I/[≡..] |   | >>I / Preset+                 |
|  | Play      |  | Play / Slow                   |
|  | Pause     |  | Pause / Step / Freeze         |
|  | Stop      |  | Stop / Hold                   |
|  | [≡i]      |  | Smart / List                  |
|  | Text      |  | Text / Goto                   |
|  | Subtitle  |  | Subtitle / EQ                 |
|  | Freeze    |  | Shift + Pause / Step / Freeze |

| Original  | Substitut  | Original  | Substitut             |
|---|------------|---|-----------------------|
|    | Info       |    | Info / Angle          |
|    | [   ]/Menu |    | Menu / Home           |
|    | Up         |    | Up                    |
|    | Source     |    | AV / Input / RDS      |
|    | Left       |    | Left                  |
|    | OK         |    | OK                    |
|    | Right      |    | Right                 |
|    | Down       |    | Down                  |
|    | EPG        |    | Guide / EPG / -/-     |
|   | Exit       |   | Exit / Cancel / Clear |
|  | Vol+       |  | Vol+                  |
|  | FAV        |  | Fav / Marker / PC     |
|  | CH+        |  | CH+ / Page+           |
|  | Vol-       |  | Vol-                  |
|  | REP/Rec    |  | Rec / Rec Mode        |
|  | CH-        |  | CH- / Page-           |
|  | 1          |  | 1                     |













| Original |        | Substitut       |                   | Original |  | Substitut |  |
|----------|--------|-----------------|-------------------|----------|--|-----------|--|
| 2        | 2      | DVD 2           | 2                 |          |  |           |  |
| 3        | 3      | CD - STB 3      | 3                 |          |  |           |  |
| 4        | 4      | VIDEO 4         | 4                 |          |  |           |  |
| 5        | 5      | TAPE 5          | 5                 |          |  |           |  |
| 6        | 6      | TUNER 6         | 6                 |          |  |           |  |
| 7        | 7      | AUX - HDD 7     | 7                 |          |  |           |  |
| 8        | 8      | USB 8           | 8                 |          |  |           |  |
| 9        | 9      | BLUETOOTH 9     | 9                 |          |  |           |  |
| AUDIO    | Audio  | LANG I/II AUDIO | Audio / Lang I/II |          |  |           |  |
| 0        | 0      | HDMI - BAT 0    | 0                 |          |  |           |  |
| RECALL   | Recall | RETURN BACK     | Back / Return     |          |  |           |  |
|          |        |                 |                   |          |  |           |  |
|          |        |                 |                   |          |  |           |  |
|          |        |                 |                   |          |  |           |  |
|          |        |                 |                   |          |  |           |  |
|          |        |                 |                   |          |  |           |  |
|          |        |                 |                   |          |  |           |  |
|          |        |                 |                   |          |  |           |  |
|          |        |                 |                   |          |  |           |  |
|          |        |                 |                   |          |  |           |  |
|          |        |                 |                   |          |  |           |  |
|          |        |                 |                   |          |  |           |  |
|          |        |                 |                   |          |  |           |  |
|          |        |                 |                   |          |  |           |  |





| Original  | Substitut   | Original | Substitut   |
|-----------|---|----------|---|
| Power     |  Power                 | TXT/MIX  |  Text / Goto           |
| Mute      |  Mute / Dimmer         | Menu     |  Menu / Home           |
| Play      |  Play / Slow           | Up       |  Up                    |
| Pause     |  Pause / Step / Freeze | Info     |  Info / Angle          |
| Stop      |  Stop / Hold           | Left     |  Left                  |
| Rec       |  Rec / Rec Mode        | Enter    |  OK                    |
| <</Hold   |  << / Tune-            | Right    |  Right                 |
| >>/Index  |  >> / Tune+            | Cancel   |  Exit / Cancel / Clear |
| I<<       |  I<< / Preset-         | Down     |  Down                  |
| >>I       |  >>I / Preset+         | Back     |  Back / Return         |
| Nicam/A2  |  Audio / Lang I/II    | Vol+     |  Vol+                 |
| Subtitle  |  Subtitle / EQ       | List     |  Smart / List        |
| Subpage   |  Eject / Surround    | CH+      |  CH+ / Page+         |
| Size      |  Zoom / Size         | Vol-     |  Vol-                |
| Sleep     |  Sleep / Timer       | Mode     |  Display / Media     |
| DTV/Radio |  TV/Radio /          | CH-      |  CH- / Page-         |
| Reveal    |  D.Menu / Top        | 1        |  1                   |

| Original  | Substitut   | Original | Substitut   |
|-----------|---|----------|---|
| Power     |  Power                 | TXT/MIX  |  Text / Goto           |
| Mute      |  Mute / Dimmer         | Menu     |  Menu / Home           |
| Play      |  Play / Slow           | Up       |  Up                    |
| Pause     |  Pause / Step / Freeze | Info     |  Info / Angle          |
| Stop      |  Stop / Hold           | Left     |  Left                  |
| Rec       |  Rec / Rec Mode        | Enter    |  OK                    |
| <</Hold   |  << / Tune-            | Right    |  Right                 |
| >>/Index  |  >> / Tune+            | Cancel   |  Exit / Cancel / Clear |
| I<<       |  I<< / Preset-         | Down     |  Down                  |
| >>I       |  >>I / Preset+         | Back     |  Back / Return         |
| Nicam/A2  |  Audio / Lang I/II    | Vol+     |  Vol+                 |
| Subtitle  |  Subtitle / EQ       | List     |  Smart / List        |
| Subpage   |  Eject / Surround    | CH+      |  CH+ / Page+         |
| Size      |  Zoom / Size         | Vol-     |  Vol-                |
| Sleep     |  Sleep / Timer       | Mode     |  Display / Media     |
| DTV/Radio |  TV/Radio /          | CH-      |  CH- / Page-         |
| Reveal    |  D.Menu / Top        | 1        |  1                   |












































| Original | Substitut                   | Original | Substitut                     |
|----------|-----------------------------|----------|-------------------------------|
| 2        | 2                           | FAV+     | +  Shift + Right              |
| 3        | 3                           | -/--     | +  Shift + Guide / EPG / -/-- |
| 4        | 4                           |          |                               |
| 5        | 5                           |          |                               |
| 6        | 6                           |          |                               |
| 7        | 7                           |          |                               |
| 8        | 8                           |          |                               |
| 9        | 9                           |          |                               |
| EPG      | Guide / EPG / -/--          |          |                               |
| 0        | 0                           |          |                               |
| FAV      | Fav / Marker / PC           |          |                               |
| Red      | Red / Netflix / Search      |          |                               |
| Green    | Green / APP / Repeat        |          |                               |
| Yellow   | Yellow / YouTube / Repeat   |          |                               |
| Blue     | Blue / Prime Video / Random |          |                               |
| <</Hold  | +  Shift + Stop /           |          |                               |
| FAV-     | +  Shift + Left             |          |                               |





| Original   | Substitut   | Original | Substitut   |
|------------|---|----------|---|
| Power      |  Power                 | Up       |  Up                    |
| Mute       |  Mute / Dimmer         | Info     |  Info / Angle          |
| Play       |  Play / Slow           | Left     |  Left                  |
| Pause      |  Pause / Step / Freeze | Ok       |  OK                    |
| Stop       |  Stop / Hold           | Right    |  Right                 |
| Rec        |  Rec / Rec Mode        | Exit     |  Exit / Cancel / Clear |
| <</[Timer] |  << / Tune-            | Down     |  Down                  |
| >>/[≡?]    |  >> / Tune+            | Recall   |  Back / Return         |
| I<</[≡⇅]   |  I<< / Preset-         | Vol+     |  Vol+                  |
| >>I/[≡...] |  >>I / Preset+         | [≡i]     |  Smart / List          |
| Audio      |  Audio / Lang I/II    | Ch+      |  CH+ / Page+          |
| Subtitle   |  Subtitle / EQ       | Vol-     |  Vol-                |
| I<</[≡⇅]   |  Zoom / Size         | Ch-      |  CH- / Page-         |
| <</[Timer] |  Sleep / Timer       | 1        |  1                   |
| Text       |  Text / Goto         | 2        |  2                   |
| Source/Av  |  AV / Input / RDS    | 3        |  3                   |
| [II]       |  Menu / Home         | 4        |  4                   |

| Original   | Substitut   | Original | Substitut   |
|------------|---|----------|---|
| Power      |  Power                 | Up       |  Up                    |
| Mute       |  Mute / Dimmer         | Info     |  Info / Angle          |
| Play       |  Play / Slow           | Left     |  Left                  |
| Pause      |  Pause / Step / Freeze | Ok       |  OK                    |
| Stop       |  Stop / Hold           | Right    |  Right                 |
| Rec        |  Rec / Rec Mode        | Exit     |  Exit / Cancel / Clear |
| <</[Timer] |  << / Tune-            | Down     |  Down                  |
| >>/[≡?]    |  >> / Tune+            | Recall   |  Back / Return         |
| I<</[≡⇅]   |  I<< / Preset-         | Vol+     |  Vol+                  |
| >>I/[≡...] |  >>I / Preset+         | [≡i]     |  Smart / List          |
| Audio      |  Audio / Lang I/II    | Ch+      |  CH+ / Page+          |
| Subtitle   |  Subtitle / EQ       | Vol-     |  Vol-                |
| I<</[≡⇅]   |  Zoom / Size         | Ch-      |  CH- / Page-         |
| <</[Timer] |  Sleep / Timer       | 1        |  1                   |
| Text       |  Text / Goto         | 2        |  2                   |
| Source/Av  |  AV / Input / RDS    | 3        |  3                   |
| [II]       |  Menu / Home         | 4        |  4                   |





| Original | Substitut                   | Original | Substitut |
|----------|-----------------------------|----------|-----------|
| 5        | 5                           |          |           |
| 6        | 6                           |          |           |
| 7        | 7                           |          |           |
| 8        | 8                           |          |           |
| 9        | 9                           |          |           |
| Epg      | Guide / EPG / -/--          |          |           |
| 0        | 0                           |          |           |
| Fav      | Fav / Marker / PC           |          |           |
| Red      | Red / Netflix / Search      |          |           |
| Green    | Green / APP / Repeat        |          |           |
| Yellow   | Yellow / YouTube / Repeat   |          |           |
| Blue     | Blue / Prime Video / Random |          |           |
| Freeze   | Shift + Pause / Step /      |          |           |
|          |                             |          |           |
|          |                             |          |           |
|          |                             |          |           |
|          |                             |          |           |
|          |                             |          |           |

