



Original		Substitut		Original		Substitut	
	Power		Power		Mute		Mute / Dimmer
	1		1		P-		CH- / Page-
	2		2		Menu/DVD		Menu / Home
	3		3		Exit/Return		Exit / Cancel / Clear
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Guide/Top		Guide / EPG / -/-
	9		9		Down		Down
	Recall		Back / Return		Tv/FAV/Radio/Set		TV/Radio /
	0		0		Tv/FAV/Radio/Set		Fav / Marker / PC
	Source		AV / Input / RDS		Red		Red / Netflix / Search
	Vol+		Vol+		Green		Green / APP / Repeat
	A/D/Content Menu		Smart / List		Yellow		Yellow / YouTube / Repeat
	P+		CH+ / Page+		Blue		Blue / Prime Video / Random
	Vol-		Vol-		[<>]		Picture / Format



































 








 

 
 





 

 

 

 













Original	Substitut	Original	Substitut
←[/]→	MEDIA DISPLAY Display / Media		
[i+]/[≡i]	ANGLE INFO Info / Angle		
AUDIO TEXT Text	GOTO TEXT Text / Goto		
AUDIO TEXT Audio	LANG I/II AUDIO Audio / Lang I/II		
SUBTITLE Subtitle	EQ SUBTITLE Subtitle / EQ		
SUBTITLE Eject	SURROUND Eject / Surround		
CD I/II O)I/II	SHIFT + LANG I/II AUDIO Shift + Audio / Lang I/II		
CD I/II Stop	HOLD Stop / Hold		
Play/[≡o]	SLOW Play / Slow		
II/II>/[▼]	STEP-FREEZE Pause / Step / Freeze		
I<</[≡?]	PRESET- I<< / Preset-		
<</[≡+]	TUNE- << / Tune-		
>>/[≡◇]	TUNE+ >> / Tune+		
>>I/[O]/[≡X]	PRESET+ >>I / Preset+		





Original	Substitut	Original	Substitut
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV / Input / RDS
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Menu/DVD		Menu / Home
	Exit/Return		Back / Return
			Up
			Left
			OK
			Right
			Guide/Top
			Down
			Tv/FAV/Radio/Set
			[<>]
			<[]>
			[i+]/[≡i]
			Text
			Audio
			Subtitle
			Eject
			O)/I/
			Stop
			Play/[≡o]
			Up
			Left
			OK
			Right
			D.Menu / Top
			Down
			Setup / OPT /
			Picture / Format
			Display / Media
			Info / Angle
			Text / Goto
			Audio / Lang I/II
			Subtitle / EQ
			Eject / Surround
			Shift + Audio / Lang I/II
			Stop / Hold
			Play / Slow











 

 

 



 











 























 




 












	Original	Substitut	Original	Substitut
	 II/II>/[▼]	 <small>STEP-FREEZE</small> II Pause / Step / Freeze		
	 I<</[≡?]	 <small>PRESET-</small> I<< / Preset-		
	 <</[≡+]	 <small>TUNE-</small> << / Tune-		
	 >>/[≡◇]	 <small>TUNE+</small> >> / Tune+		
	 >>I/[O]/[≡X]	 <small>PRESET+</small> >>I / Preset+		





Original		Substitut		Original		Substitut	
	Power		Power		Mute		Mute / Dimmer
	1		1		P-		CH- / Page-
	2		2		Menu/DVD		Menu / Home
	3		3		Exit/Return		Shift + Back / Return
	4		4		Exit/Return		Exit / Cancel / Clear
	5		5		Up		Up
	6		6		Left		Left
	7		7		OK		OK
	8		8		Right		Right
	9		9		Guide/Top		D.Menu / Top
	Recall		Back / Return		Down		Down
	0		0		Tv/FAV/Radio/Set		TV/Radio /
	Source		AV / Input / RDS		Tv/FAV/Radio/Set		Setup / OPT /
	Vol+		Vol+		Red		Red / Netflix / Search
	A/D / Content		Smart / List		Green		Green / APP / Repeat
	P+		CH+ / Page+		Yellow		Yellow / YouTube / Repeat
	Vol-		Vol-		Blue		Blue / Prime Video / Random





Original	Substitut	Original	Substitut
[<>]	Picture / Format		
<-[/]->	Display / Media		
[i+]/[≡i]	Info / Angle		
Text	Text / Goto		
Audio	Audio / Lang I/II		
Subtitle	Subtitle / EQ		
Eject	Eject / Surround		
O)I/II	+ Shift + Audio / Lang I/II		
Stop	Stop / Hold		
Play/[≡o]	Play / Slow		
II/II>/[▼]	Pause / Step / Freeze		
I<</[≡?]	I<< / Preset-		
<</[≡+]	<< / Tune-		
>>/[≡◇]	>> / Tune+		
>>I/[O]/[≡X]	>>I / Preset+		

