




 





 

 



 











 











 







 



 



 
 
 

 













 








 

 

 











 











 







 



 



 





 

 




Original	Substitut	Original	Substitut
 Power	 Power	 Display	 Info
 VCR/DVD	 Media	 On Screen/Progressiv	 3D
 DVD Timer	 Green	 Top	 Shift + Menu
 VCR Timer	 Red	 Menu	 Menu
 1	 1	 Set Up	 Options
 2	 2	 Return	 Back
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 Enter	 Ok
 8	 8	 I<</Previous	 I<<
 9	 9	 >>I/Next	 >>I
 0/AUX	 0	 <</Slow-	 <<
 X/Cancel	 Exit	 Play/Select	 Play
 Showview/Video Plus+	 Guide	 >>/Slow+	 >>
 Prog/Check	 Sleep	 Stop/Clear	 Stop

Original	Substitut	Original	Substitut
 TV	 MUTE	 SHIFT	
 DVD	 TV/DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 TV	 DVD
 STOP	 PAUSE	 PLAY	 STOP
 DISC NAV	 SOUND	 AD	 SETTINGS
 LIST	 DUAL	 SUBT	 OPT
 PROG	 SEARCH	 PICTURE	 ECO
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 UP	 AV
 TOP MENU	 DISPLAY INFO	 OK	
 EXIT	 RETURN BACK	 HOME	 SMART
 VOL +	 HOME	 APP	 CH +
 VOL -	 SMART	 MEDIA	 CH -
 1	 2	 3	
 4	 5	 6	
 7	 8	 9	
 8	 9	 FAV	
 GUIDE	 0	 PRE-CH	
 A	 B	 C	 D
 Mandis SHOP			
www.mandis.tv			





 


 



Original	Substitut	Original	Substitut
 Power	 Power	 Prog/Check	 Sleep
 VCR/DVD	 Media	 Display	 Info
 DVD Timer	 Green	 On  Screen/Progressiv	 3D
 VCR Timer	 Red	 Top	 Shift + Menu
 1	 1	 Menu	 Menu
 2	 2	 Set Up	 Options
 3	 3	 Return	 Back
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 Enter	 Ok
 9	 9	 I<</Previous	 I<<
 0/AUX	 0	 >>/Next	 >>I
 X/Cancel	 Exit	 <</Slow-	 <<
 Memory/Mark	 Smart	 Play Select	 Play
 Showview/Video Plus+	 Guide	 >>/Slow+	 >>

Original	Substitut	Original	Substitut
 Power	 Power	 Prog/Check	 Sleep
 VCR/DVD	 Media	 Display	 Info
 DVD Timer	 Green	 On  Screen/Progressiv	 3D
 VCR Timer	 Red	 Top	 Shift + Menu
 1	 1	 Menu	 Menu
 2	 2	 Set Up	 Options
 3	 3	 Return	 Back
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 Enter	 Ok
 9	 9	 I<</Previous	 I<<
 0/AUX	 0	 >>/Next	 >>I
 X/Cancel	 Exit	 <</Slow-	 <<
 Memory/Mark	 Smart	 Play Select	 Play
 Showview/Video Plus+	 Guide	 >>/Slow+	 >>










 


 
 







 

 









 

 





 





 

 

 

 



 














Original		Substitut		Original	Substitut
	Stop/Clear		Stop		
	Pause		Pause		
	Rec		Rec		
	Remain/Rec		Shift + Rec		
	↔		Pre Ch		
	→		Blue		
	Angle/Live Check		AV		
	Subtitle		Subt		
	TV/DVD-TV/VCR		TV/R		
	Mute/Audio		Mute		
	PR+		Ch +		
	PR- TV/CBL/DVD		Ch -		
	Vol+ Tv		Vol +		
	Vol- Tv		Vol -		





Original	Substitut	Original	Substitut
 Power	 Power	 Menu	 Menu
 VCR/DVD	 Media	 Up	 Up
 DVD Timer	 Green	 Down	 Down
 VCR Timer	 Red	 Right	 Right
 1	 1	 Left	 Left
 2	 2	 Enter	 Ok
 3	 3	 I<</Previous	 I<<
 4	 4	 >>/Next	 >>I
 5	 5	 <</Slow-	 <<
 6	 6	 Play/Select	 Play
 7	 7	 >>/Slow+	 >>
 8	 8	 Stop/Clear	 Stop
 9	 9	 Pause	 Pause
 0/AUX	 0	 Rec	 Rec
 Prog/Check	 Sleep	 Remain/Rec	 Shift + Rec
 Display	 Info	 ↔	 Pre Ch
 Top	 Shift + Menu	 →	 Blue

Original	Substitut	Original	Substitut
 Power	 Menu	 Up	 Up
 VCR/DVD	 Media	 Down	 Down
 DVD Timer	 Green	 Right	 Right
 VCR Timer	 Red	 Left	 Left
 1	 1	 Enter	 Ok
 2	 2	 I<</Previous	 I<<
 3	 3	 >>/Next	 >>I
 4	 4	 <</Slow-	 <<
 5	 5	 Play/Select	 Play
6	6	>>/Slow+	>>
7	7	Stop/Clear	Stop
8	8	Pause	Pause
9	9	Rec	Rec
0/AUX	0	Remain/Rec	Shift + Rec
Prog/Check	Sleep	↔	Pre Ch
Display	Info	→	Blue
Top	Shift + Menu		



