



Original	Substitut	Original	Substitut
 Power Audio	 Power	 Menu/PL	 Menu / Home
 Power Tv	 Shift + Power	 Top Menu/PG	 D.Menu / Top
 1	 1	 On Screen	 Display / Media
 2	 2	 Play	 Play / Slow
 3	 3	 Stop	 Stop / Hold
 5	 5	 Pause	 Pause / Step / Freeze
 4	 4	 Back/Tuner/Play Mode	 Back / Return
 6	 6	 I<<	 I<< / Preset-
 7	 7	 >>I	 >>I / Preset+
 8	 8	 <<	 << / Tune-
 9	 9	 >>	 >> / Tune+
 0	 0	 Play/Pause	 Red / Netflix / Search
 10	 Guide / EPG / -/--	 Play/Pause USB	 Shift + Play /
 +10	 Fav / Marker / PC	 Play/Pause	 Shift + Yellow / YouTube /
 Audio Vol+	 Vol+	 Play/Pause Bluetooth	 Blue / Prime Video / Random
 Audio Vol-	 Vol-	 Audio/MPX	 Audio / Lang I/II
 Fade Muting	 Mute / Dimmer	 Subtitle	 Subtitle / EQ

Original	Substitut	Original	Substitut
 Menu/PL	 Menu / Home	 Top Menu/PG	 D.Menu / Top
 On Screen	 Display / Media	 Play	 Play / Slow
 Stop	 Stop / Hold	 Pause	 Pause / Step / Freeze
 Back/Tuner/Play Mode	 Back / Return	 I<<	 I<< / Preset-
 >>I	 >>I / Preset+	 <<	 << / Tune-
 >>	 >> / Tune+	 Play/Pause	 Red / Netflix / Search
 Play/Pause USB	 Shift + Play /	 Play/Pause	 Shift + Yellow / YouTube /
 Play/Pause Bluetooth	 Blue / Prime Video / Random	 Audio/MPX	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ		





Original	Substitut	Original	Substitut
Zoom	Zoom / Size	Angle	Info / Angle
Audio In	+  Shift + Display / Media	Tv Vol+	+  Shift + Right
File Type	Text / Goto	Tv Vol-	+  Shift + Left
Repeat	Green / APP / Repeat	Enter/Set	OK
VFP/Scan Mode	AV / Input / RDS	Up	Up
3D Phonic/HP	TV/Radio /	Down	Down
C.Voice	+  Shift + Setup / OPT / Tools	Right	Right
DVD Audio In	+  Shift + Sound / Title	Left	Left
My Sound	Picture / Format	Sleep	Sleep / Timer
Sound Mode	Sound / Title	A.STBY	+  Shift + 0
Subwoofer Level+	CH+ / Page+	Clock/Timer	+  Shift + Sleep / Timer
V.Bass	+  Shift + Audio / Lang I/II	MIC Vol+	+  Shift + Up
Subwoofer Level-	CH- / Page-	MIC Vol-	+  Shift + Down
Repeat A-B	Yellow / YouTube / Repeat	Karaoke Setting	Smart / List
Cancel	Exit / Cancel / Clear	Mic Mix	+  Shift + Smart / List
Set Up	Setup / OPT /	TV Channel+	+  Shift + CH+ /
Return	+  Shift + Back / Return	Vocal Masking	Eject / Surround

Original	Substitut	Original	Substitut
Angle	Info / Angle	Angle	Info / Angle
Tv Vol+	+  Shift + Right	Tv Vol-	+  Shift + Left
Enter/Set	OK	Up	Up
Down	Down	Right	Right
Left	Left	Sleep	Sleep / Timer
A.STBY	+  Shift + 0	Clock/Timer	+  Shift + Sleep / Timer
MIC Vol+	+  Shift + Up	MIC Vol-	+  Shift + Down
Karaoke Setting	Smart / List	Mic Mix	+  Shift + Smart / List
Set Up	Setup / OPT /	TV Channel+	+  Shift + CH+ /
Return	+  Shift + Back / Return	Vocal Masking	Eject / Surround





