



Original	Substitut	Original	Substitut
	1		1
	2		2
	3		3
	Power		Power
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide / EPG / -/--
	Loudness/Down		CH- / Page-
	Up Page/PTY		CH+ / Page+
	Set Up		Setup / OPT /
	Sound		Sound / Title
	Listen Mode		Smart / List
	RDS Display		Display / Media
	Left P.Call/ </>		I<< / Preset-
	Up Multi Control		Up
	Right P.Call		>>I / Preset+
	Down Multi		Down
	<< Tuning		<< / Tune-
	>> Tuning		>> / Tune+
	Play Reverse		Left
	Play/Pause / Band		Play / Slow
	Play/Pause / Band		Pause / Step / Freeze
	Bass Boost		Audio / Lang I/II
	A/B / +100 / Disc Skip		Fav / Marker / PC
	Auto / Stop		Stop / Hold
	DVD		Shift + 2
	AUX		Shift + 7
	CD/DVD		Shift + 3
	Tuner		Shift + 6





	Original	Substitut		Original	Substitut
	MD/Tape	+  5	Shift + 5		
	Video1	+  4	Shift + 4		
	Video 2	+  8	Shift + 8		
	Active EQ		Subtitle / EQ		
	Tone		Eject / Surround		
	Mute		Mute / Dimmer		
	Vol-		Vol-		
	Vol+		Vol+		







Original	Substitut	Original	Substitut
DVD Power	Power	Up	Up
1	1	Right/>>I	>>I / Preset+
2	2	Down	Down
3	3	<< Tuning	<< / Tune-
4	4	>> Tuning	>> / Tune+
5	5	Enter	OK
6	6	Play/Pause	Play / Slow
7	7	Stop	Stop / Hold
8	8	Pause	Pause / Step / Freeze
9	9		
0	0		
+10	Guide / EPG / -/--		
Menu	Menu / Home		
OSD	Display / Media		
Return	Back / Return		
Top Menu	D.Menu / Top		
Left/I<<<	I<<< / Preset-		

