



 







 

 
 

 


















 



 



 



 



 

 

 















Original	Substitut	Original	Substitut
 Power	 Power	 Up	 Up
 EPG	 Guide / EPG / -/--	 Display	 Display / Media
 REP	 TV/Radio /	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 Rec List	 Shift + Rec / Rec Mode	 Right	 Right
 CH List	 Smart / List	 Menu	 Menu / Home
 Subtitle	 Subtitle / EQ	 Down	 Down
 Eject	 Eject / Surround	 Exit	 Exit / Cancel / Clear
 Rec	 Rec / Rec Mode	 1	 1
 Stop	 Stop / Hold	 2	 2
 I<<	 I<< / Preset-	 3	 3
 >>I	 >>I / Preset+	 4	 4
 Pause	 Pause / Step / Freeze	 5	 5
 Play	 Play / Slow	 6	 6
 <<	 << / Tune-	 7	 7
 >>	 >> / Tune+	 8	 8
 Source	 AV / Input / RDS	 9	 9





Original	Substitut
0	0
Recall	Back / Return
Fav	Fav / Marker / PC
Vol +	Vol+
Picture	Picture / Format
Nicam / A2	Audio / Lang I/II
CH +	CH+ / Page+
Vol -	Vol-
Sound	Sound / Title
Sleep	Sleep / Timer
CH -	CH- / Page-
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue / Screen	Blue / Prime Video / Random
Setup / TV/Txt	Setup / OPT /
D-Menu /	D.Menu / Top

Original	Substitut
Title / Reveal	Shift + Sound / Title
PRO	Shift + Display / Media
LAN / Hold	Shift + Smart / List
Size / A-B	Zoom / Size
Goto / Subpage	Text / Goto
Index / Slow	Info / Angle

