

 

 
 





 
 

























Original	Substitut
	Power
	Source
	Text
	T.Opt
	AD
	*
	1
	2
	3
	4
	5
	6
	7
	8
	9
	List
	0

Original	Substitut
	...
	Vol+
	Mute
	CH+
	Vol-
	Search
	CH-
	TV
	Netflix
	Home
	prime video
	Disney+
	Up
	Movies
	Left
	OK
	Right





Original	Substitut
 Back	 Back / Return
 Down	 Down
 [→]	 Exit / Cancel / Clear
 Guide	 Guide / EPG / -/--
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Substitut

