



Original	Substitut
Function	Smart / List
Power	Power
Open/Close	Eject / Surround
Sleep	Sleep / Timer
Title	Sound / Title
Display	Display / Media
Menu	Menu / Home
Setup	Setup / OPT /
Preset Up	Shift + >> / Preset+
Preset Up	Up
Left/Tun-	Left
Left/Tun-	Shift + << /
Enter	OK
Right/Tun+	Right
Right/Tun+	Shift + >> /
Preset Down	Shift + I<< / Preset-
Preset Down	Down

Original	Substitut
Return	Back / Return
Rec	Rec / Rec Mode
Stop	Stop / Hold
Play / Mo/St.	Play / Slow
Pause/Step	Pause / Step / Freeze
I<< Skip	I<< / Preset-
<< Scan	<< / Tune-
Scan >>	>> / Tune+
Skip >>I	>>I / Preset+
Audio/Tv->HT SPK	Audio / Lang I/II
Vol+	Vol+
Night	Shift + Sleep / Timer
Mute	Mute / Dimmer
Vol-	Vol-
♪/Special EQ	Shift + Subtitle / EQ
1	1
2	2





Original	Substitut
3	3
Random/Repeat	Green / APP / Repeat
Random/Repeat	Blue / Prime Video / Random
4	4
5	5
6	6
[...] / Subtitle	Subtitle / EQ
7	7
8	8
9	9
0	0
Power Tv	Shift + Power
PR/CH+ Tv	Shift + CH+ /
Vol+ TV	Shift + Vol+
Prog.Memo	TV/Radio /
Input Tv	Shift + AV / Input / RDS
PR/CH- Tv	Shift + CH- /

Original	Substitut
Vol- Tv	Shift + Vol-
Clear	Exit / Cancel / Clear
RDS	AV / Input / RDS
PTY/Resolution	Picture / Format



Page-