 


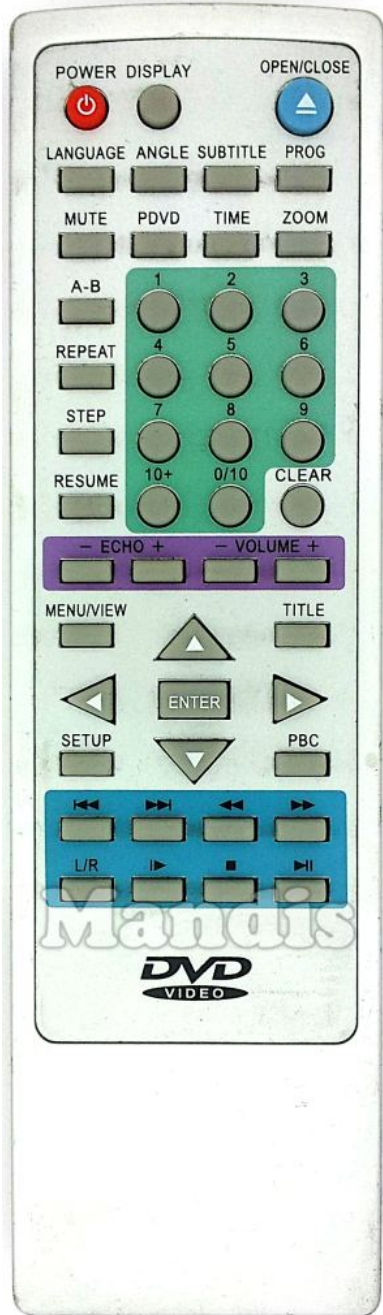 






 
 





 

 





 





Original	Substitut	Original	Substitut
Power	Power	5	5
Display	Display / Media	6	6
Open/Close	Eject / Surround	Step	+ Shift + Pause / Step /
Language	Audio / Lang I/II	7	7
Angle	Info / Angle	8	8
Subtitle	Subtitle / EQ	9	9
Prog	TV/Radio /	Resume	Smart / List
Mute	Mute / Dimmer	10+	Guide / EPG / -/-
PDVD	AV / Input / RDS	0/10	0
Time	Sleep / Timer	Clear	Exit / Cancel / Clear
Zoom	Zoom / Size	Echo-	CH- / Page-
A-B	Yellow / YouTube / Repeat	Echo+	CH+ / Page+
1	1	Volume-	Vol-
2	2	Volume+	Vol+
3	3	Menu/View	Menu / Home
Repeat	Green / APP / Repeat	Up	Up
4	4	Title	Sound / Title

Original	Substitut	Original	Substitut
5	5	5	5
6	6	6	6
Step	+ Shift + Pause / Step /	+ Shift + Pause / Step /	+ Shift + Pause / Step /
7	7	7	7
8	8	8	8
9	9	9	9
Resume	Smart / List	Smart / List	Smart / List
10+	Guide / EPG / -/-	Guide / EPG / -/-	Guide / EPG / -/-
0/10	0	0	0
Clear	Exit / Cancel / Clear	Exit / Cancel / Clear	Exit / Cancel / Clear
Echo-	CH- / Page-	CH- / Page-	CH- / Page-
Echo+	CH+ / Page+	CH+ / Page+	CH+ / Page+
Volume-	Vol-	Vol-	Vol-
Volume+	Vol+	Vol+	Vol+
Menu/View	Menu / Home	Menu / Home	Menu / Home
Up	Up	Up	Up
Title	Sound / Title	Sound / Title	Sound / Title





Original	Substitut	Original	Substitut
	Left		Left
	Enter		OK
	Right		Right
	Setup		Setup / OPT /
	Down		Down
	PBC		Picture / Format
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	L/R		Text / Goto
	I>		Pause / Step / Freeze
	Stop		Stop / Hold
	Play/Pause		Play / Slow

Original	Substitut	Original	Substitut

