



Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	+	Shift + Guide
	Recall		Back
	Display		Info
	Source		AV
	Up		Up

Original	Substitut	Original	Substitut
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Exit		Exit
	Menu		Menu
	Vol+		Vol +
	Vol-		Vol -
	S.Mode	+	Shift + Dual
	CH+		Ch +
	CH-		Ch -
	Audio I/II		Dual
	P.Mode	+	Shift + Format
	Auto		Smart
	Sleep		Sleep
	Aspect		Format
	Red / Eject		Red





Original	Substitut
Red / Eject	Eject
Green / D.Menu	Green
Green / D.Menu	D. Menu
Yellow / Setup	Yellow
Yellow / Setup	Options
Blue / D.Disp	Blue
Blue / D.Disp	List
Play/Pause / Text	Text
Play/Pause / Text	Play
Play/Pause / Text	Pause
Stop / Index	Stop
A-B / MIX	Shift + TV/R
Repeat / Reveal	Shift + Text
<< / Hold	Shift + Stop
<< / Hold	<<
>> / Subpage	>>
>> / Subpage	Shift + Subt

Original	Substitut
I<< / Size	I<<
I<< / Size	Shift + Eject
>>I / Cancel	>>I
>>I / Cancel	Shift + Exit
Time Shift	Media
Rec	Rec
FAV-	Shift + Left
FAV+	Shift + Right
EPG	Guide
FAV	Pre Ch
Subtitle	Subt
TV / Radio	TV/R

