


 









 


 
 


 



 



 

 



 

 



 



 


 
 



 









Original	Substitut
Standby	Power
AQT/Auto/Open/CI	Eject / Surround
P.Mode	Picture / Format
S.Mode	Sound / Title
List/Angle	Smart / List
Aspect	Setup / OPT /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Recall	Back / Return

Original	Substitut
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
Audio	Audio / Lang I/II
Sub-T	Subtitle / EQ
CH+	CH+ / Page+
CH-	CH- / Page-
Menu	Menu / Home
Info	Info / Angle
Input	AV / Input / RDS
DVD Setup/Exit	Exit / Cancel / Clear
Sleep	Sleep / Timer
Up	Up
Down	Down
Right	Right
Left	Left
OK	OK





Original	Substitut	Original	Substitut
 Standby	 Power	 Vol+	 Vol+
 AQT/Auto/Open/CI	 Eject / Surround	 Vol-	 Vol-
 P.Mode	 Picture / Format	 Mute	 Mute / Dimmer
 S.Mode	 Sound / Title	 Audio	 Audio / Lang I/II
 List/Angle	 Smart / List	 Sub-T	 Subtitle / EQ
 Aspect	 Setup / OPT /	 CH+	 CH+ / Page+
 1	 1	 CH-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Info	 Info / Angle
 4	 4	 Input	 AV / Input / RDS
 5	 5	 DVD Setup/Exit	 Exit / Cancel / Clear
 6	 6	 Sleep	 Sleep / Timer
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 Recall	 Back / Return	 OK	 OK





Original	Substitut	Original	Substitut
Rec	Rec / Rec Mode		
Red/D.Prog/Tv/	Red / Netflix / Search		
Green/Step	Green / APP / Repeat		
Yellow/RPT	Yellow / YouTube / Repeat		
Blue/A-B/SCR	Blue / Prime Video / Random		
[=]/Slow	Text / Goto		
[=▲]/Stop	Stop / Hold		
[=▼]/Zoom	Zoom / Size		
[=i]/I<<	I<< / Preset-		
[=+]/Play/Pause	Play / Slow		
[=◇]/>>I	>>I / Preset+		
[=?]/<<<	<<< / Tune-		
[=o]/>>>	>>> / Tune+		
EPG/D.Menu	Guide / EPG / -/--		
FAV/D.Title	Fav / Marker / PC		
FAV+/D.Goto	Shift + CH+ /		
FAV-/D.Disp	Shift + CH- /		

Original	Substitut

