



Original	Substitut	Original	Substitut
 Power	 Power	 Program	 TV/Radio /
 TV Sys	 D.Menu / Top	 Clear	 Exit / Cancel / Clear
 Setup	 Setup / OPT /	 0	 0
 Eject	 Eject / Surround	 Slow	 Shift + Play /
 Info.	 Info / Angle	 Up	 Up
 1	 1	 Pause / Step	 Pause / Step / Freeze
 2	 2	 Left	 Left
 3	 3	 Play / Sel	 OK
 Repeat A-B	 Yellow / YouTube / Repeat	 Play / Sel	 Play / Slow
 4	 4	 Right	 Right
 5	 5	 Prev	 I<< / Preset-
 6	 6	 Down	 Down
 Repeat 1/all	 Green / APP / Repeat	 Next	 >>I / Preset+
 7	 7	 F.Bwd	 << / Tune-
 8	 8	 Stop	 Stop / Hold
 9	 9	 F.Fwd	 >> / Tune+
 Goto	 Text / Goto	 PBC	 Smart / List

Original	Substitut	Original	Substitut
 Power	 DIMMER MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG VUI	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 AV INPUT
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 INFO	
 MENU	 OK	 RETURN	
 CLEAR	 EXIT	 BACK	
 CANCEL	 LIST	 CH PAGE	
 VOL +	 SMART	 MEDIA	
 VOL -	 DISPLAY	 DISP	
 TV	 DVD	 CD - STB	
 1	 2	 3	
 4	 5	 6	
 AUX - HDD	 USB	 BLUETOOTH	
 7	 8	 9	
 GUIDE EPG	 HDMI - BAT	 PC	
 NETFLIX	 APP	 YouTube	 Prime Video
 SEARCH	 REPEAT	 REPEAT A-B	 RANDOM
 Mandis SHOP			
www.mandis-shop.com			



