



Original	Substitut
 Power	 Power
 CBL/SAT	 Shift + 1
 DVD	 Shift + 2
 Tv Audio	 Dual
 Blu-ray	 Shift + 3
 AUX	 Shift + 4
 Tuner	 Shift + 5
 Bluetooth	 Shift + 6
 Game	 Shift + 7
 8K	 Shift + 8
 Phono	 Shift + 9
 USB	 Pre Ch
 Media Player	 Media
 CD	 Guide
 Heos	 Shift + 0
 Internet Radio	 TV/R
 CH/Page+	 Ch +

Original	Substitut
 CH/Page-	 Ch -
 Sleep	 Sleep
 Eco	 3D
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Info	 Info
 Option	 Options
 Back	 Back
 Setup	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Home	 Smart
 Stop	 Stop





Original		Substitut		Original		Substitut	
	Pause		Pause		4		4
	Play		Play		5		5
	I<</Tune-		I<<		6		6
	>>I/Tune+		>>I		7		7
	<<		<<		8		8
	>>		>>		9		9
	Smart Select 1		D. Menu		0		0
	Smart Select 2		Text				
	Smart Select 3		Eject				
	Smart Select 4		AV				
	Green/Movie		Green				
	Red/Music		Red				
	Blue/Game		Blue				
	Yellow/Pure		Yellow				
	1		1				
	2		2				
	3		3				





Original	Substitut	Original	Substitut
 Power	 Power	 Stop	 Stop
 1	 1	 Pause	 Pause
 2	 2	 Play	 Play
 3	 3	 >>	 >>
 4	 4	 <<	 <<
 5	 5	 >> Tune+	 >>
 6	 6	  <</Tune-	  <<
 7	 7	 Smart Select 1	 D. Menu
 8	 8	 Smart Select 2	 Text
 9	 9	 Smart Select 3	 Eject
 0	 0	 Smart Select 4	 AV
 Up	 Up	 CH/Page+	 Ch +
 Enter	 Ok	 CH/Page-	 Ch -
 Down	 Down	 Sleep	 Sleep
 Right	 Right	 Mute	 Mute
 Left	 Left	 Back	 Back
 Home	 Smart	 Vol+	 Vol +





 


Original	Substitut
	Vol -
	+  Shift + 1
	+  Shift + 2
	+  Shift + 3
	+  Shift + 4
	+  Shift + 5
	+  Shift + 6
	+  Shift + 7
	+  Shift + 8
	+  Shift + 9
	Media
	TV/R
	Guide
	Pre Ch
	+  Shift + 0
	Dual

Original	Substitut





Original	Substitut	Original	Substitut
 Power	 Power	 Smart Select 2	 Text
 1	 1	 Smart Select 3	 Eject
 2	 2	 Smart Select 4	 AV
 3	 3	 Back	 Back
 4	 4	 CH/Page+	 Ch +
 5	 5	 CH/Page-	 Ch -
 6	 6	 Mute	 Mute
 7	 7	 Sleep	 Sleep
 8	 8	 Vol+	 Vol +
 9	 9	 Vol-	 Vol -
 0	 0	 CBL/SAT	 Shift + 1
 Up	 Up	 DVD	 Shift + 2
 Enter	 Ok	 Blu-ray	 Shift + 3
 Down	 Down	 AUX	 Shift + 4
 Right	 Right	 Tuner	 Shift + 5
 Left	 Left	 Bluetooth	 Shift + 6
 Smart Select 1	 D. Menu	 Game	 Shift + 7

Original	Substitut	Original	Substitut
 Smart Select 2	 Text	 Smart Select 3	 Eject
 Smart Select 3	 Eject	 Smart Select 4	 AV
 Smart Select 4	 AV	 Back	 Back
 Back	 Back	 CH/Page+	 Ch +
 CH/Page+	 Ch +	 CH/Page-	 Ch -
 CH/Page-	 Ch -	 Mute	 Mute
 Mute	 Mute	 Sleep	 Sleep
 Sleep	 Sleep	 Vol+	 Vol +
 Vol+	 Vol +	 Vol-	 Vol -
 Vol-	 Vol -	 CBL/SAT	 Shift + 1
 CBL/SAT	 Shift + 1	 DVD	 Shift + 2
 DVD	 Shift + 2	 Blu-ray	 Shift + 3
 Blu-ray	 Shift + 3	 AUX	 Shift + 4
 AUX	 Shift + 4	 Tuner	 Shift + 5
 Tuner	 Shift + 5	 Bluetooth	 Shift + 6
 Bluetooth	 Shift + 6	 Game	 Shift + 7
 Game	 Shift + 7		





Original	Substitut
BK      8K	SHIFT + <b>8</b> Shift + 8
PHONO      Phono	SHIFT + <b>9</b> Shift + 9
USB      USB	FAV PRE-CH      Pre Ch
MEDIA PLAYER      Media Player	APP MEDIA      Media
CD      CD	GUIDE      Guide
INTERNET RADIO      Internet Radio	SEARCH TV/R      TV/R
:i:.      .:i.:	SHIFT + <b>0</b> Shift + 0
HOME      Home	HOME SMART      Smart
Stop      Stop	Stop      Stop
Pause      Pause	Pause      Pause
Play      Play	PLAY MODE      Play
>>      >>	>>      >>
<<      <<	<<      <<
TUNE +      >>I/Tune+	>>I      >>I
TUNE -      I<</Tune-	I<<      I<<
TV AUDIO      Tv Audio	SOUND DUAL      Dual

Original	Substitut

