







 







| Original | Substitut |
|---|---|
|  | Power |
|  | Shift +  0 |
|  | Shift +  2 |
|  |  |
|  | Shift +  1 |
|  | Shift +  7 |
|  | Shift +  6 |
|  | Shift +  9 |
|  | Shift +  5 |
|  |  |
|  |  |
|  |  |
|  |  |
|  | Shift +  3 |
|  |  |
|  | Shift +  |
|  |  |

| Original | Substitut |
|---|---|
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  | Shift +  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |





| Original | Substitut |
|--|---|
|  Play |  Play / Slow |
|  I<</Tune- |  I<< / Preset- |
|  >>I/Tune+ |  >>I / Preset+ |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  Smart Select 1 |  Shift + Red / Netflix / |
|  Smart Select 2 |  Shift + Green / APP / |
|  Smart Select 3 |  Shift + Yellow / YouTube / |
|  Smart Select 4 |  Shift + Blue / Prime |
|  Green |  Green / APP / Repeat |
|  Red |  Red / Netflix / Search |
|  Blue |  Blue / Prime Video / Random |
|  Yellow |  Yellow / YouTube / Repeat |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |

| Original | Substitut |
|---|---|
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |





| Original | Substitut | Original | Substitut |
|---|----------------|---|-----------------------------|
|  | Power |  | Power |
|  | CBL/SAT |  | Setup / OPT / |
|  | DVD |  | Shift + 2 |
|  | TV/Audio |  | TV/Radio / |
|  | Blu-ray |  | AV / Input / RDS |
|  | AUX1 |  | Picture / Format |
|  | Tuner |  | Shift + 6 |
|  | Bluetooth |  | Shift + 9 |
|  | Game |  | Shift + Setup / OPT / Tools |
|  | AUX2 |  | Subtitle / EQ |
|  | Phono |  | Audio / Lang I/II |
|  | iPod/USB |  | Guide / EPG / -/-- |
|  | Media Player |  | Display / Media |
|  | CD |  | Shift + 3 |
|  | Online Music |  | Shift + Fav / Marker / PC |
|  | Internet/Radio |  | Shift + TV/Radio / Program |
|  | CH+ |  | CH+ / Page+ |

| Original | Substitut | Original | Substitut |
|---|-----------|---|-----------------------|
|  | Vol+ |  | Vol+ |
|  | CH- |  | CH- / Page- |
|  | Sleep |  | Sleep / Timer |
|  | Mute |  | Mute / Dimmer |
|  | Vol- |  | Vol- |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | Fav / Marker / PC |
|  | Right |  | Right |
|  | Back |  | Back / Return |
|  | Down |  | Down |
|  | Home |  | Menu / Home |
|  | Stop |  | Stop / Hold |
|  | Pause |  | Pause / Step / Freeze |
|  | Play |  | Play / Slow |
|  | I<</Tune- |  | I<< / Preset- |
|  | >>I/Tune- |  | >>I / Preset+ |





| Original | Substitut | Original | Substitut |
|----------|-----------|----------|------------|
| | << | | << / Tune- |
| | >> | | >> / Tune+ |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | 0 | | 0 |
| | Enter | | OK |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

