






Original	Substitut
 Standby	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 I<<<	 I<<< / Preset-
 >>>I	 >>>I / Preset+
 S.Mode	 Sound / Title
 Audio/Tv/Radio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Eject/Auto	 Eject / Surround
 P.Mode	 Picture / Format
 Zoom/Hold	 Zoom / Size
 Sleep	 Sleep / Timer

Original	Substitut
 D.Menu/Index	 D.Menu / Top
 Goto/Subpage	 Text / Goto
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Angle/Text	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Recall	 Back / Return
 Vol+	 Vol+
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-





Original	Substitut	Original	Substitut
1	1	TV	1
2	2	DVD	2
3	3	CD - STB	3
4	4	VIDEO	4
5	5	TAPE	5
6	6	TUNER	6
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
EPG	EPG	GUIDE EPG	Guide / EPG / -/--
0	0	HDMI - BAT	0
FAV-	FAV	PC FAV MARKER	Fav / Marker / PC
PROG	Red / Del / Prog	NETFLIX SEARCH	Red / Netflix / Search
RENAME	Green / Rename	APP REPEAT	Green / APP / Repeat
REPEAT	Yellow / Move / Repeat	YouTube REPEAT A-B	Yellow / YouTube / Repeat
A-B	Blue / Skip / A-B	Prime Video RANDOM	Blue / Prime Video / Random
LANG	I>/Lang	SHIFT + PRESET+	Shift + >>1 / Preset+

Original	Substitut	Original	Substitut
NICAM	Nicam	SHIFT + TITLE SOUND	Shift + Sound / Title
TV/RADIO AUDIO	Audio/Tv/Radio	SHIFT + LANG I/II AUDIO	Shift + Audio / Lang I/II
ASPECT	Aspect	SHIFT + FORMAT PICTURE	Shift + Picture / Format
SIZE TITLE	Title/Size	SHIFT + SIZE ZOOM	Shift + Zoom /
REVEAL D.DISP	D.Disp/Reveal	SHIFT + TOP MENU D.MENU	Shift + D.Menu / Top Menu
LANG	I>/Lang	SHIFT + [Right Arrow]	Shift + Right
DVD SETUP	DVD Setup	SHIFT + DVD 2	Shift + 2
FAV+	FAV+	SHIFT + BLUETOOTH 9	Shift + 9
-/--	-/--	SHIFT + -/-- GUIDE EPG	Shift + Guide / EPG / -/--
FAV-	FAV-	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC

