























 





















| Original   | Substitut   | Original  | Substitut   |
|--|---|---|---|
|  Standby          |  Power                   |  8             |  8                     |
|  Auto / Eject     |  Eject / Surround        |  9             |  9                     |
|  Mute             |  Mute / Dimmer           |  Input         |  AV / Input / RDS      |
|  P.Mode           |  Picture / Format        |  0             |  0                     |
|  S.Mode           |  Sound / Title           |  Recall        |  Back / Return         |
|  Info             |  Info / Angle            |  Sleep         |  Sleep / Timer         |
|  Nicam            |  Audio / Lang I/II       |  Up            |  Up                    |
|  1                |  1                       |  Left          |  Left                  |
|  2                |  2                       |  Enter         |  OK                    |
|  3                |  3                       |  Right         |  Right                 |
|  Menu             |  Menu / Home             |  Down          |  Down                  |
|  4              |  4                     |  CH-         |  CH- / Page-         |
|  5              |  5                     |  CH+         |  CH+ / Page+         |
|  6              |  6                     |  Vol-        |  Vol-                |
|  Exit / D.Setup |  Setup / OPT /         |  Vol+        |  Vol+                |
|  Exit / D.Setup |  Exit / Cancel / Clear |  Text / Slow |  Text / Goto         |
|  7              |  7                     |  Text / Slow |  Shift + Play / Slow |

| Original  | Substitut   | Original  | Substitut   |
|---|---|---|---|
|  8             |  8                     |  8             |  8             |
|  9             |  9                     |  9             |  9             |
|  Input         |  AV / Input / RDS      |  0             |  0             |
|  Recall        |  Back / Return         |  Sleep         |  Sleep / Timer |
|  Up            |  Up                    |  Left          |  Left          |
|  Enter         |  OK                    |  Right         |  Right         |
|  Down          |  Down                  |  CH-         |  CH- / Page- |
|  CH+         |  CH+ / Page+         |  Vol-        |  Vol-        |
|  Vol+        |  Vol+                |  Text / Slow |  Text / Goto |
|  Text / Slow |  Shift + Play / Slow |   |   |





| Original          | Substitut                |
|-------------------|--------------------------|
| Hold / Play/Pause | Play / Slow              |
| Hold / Play/Pause | +  Shift + Stop /        |
| Hold / Play/Pause | Pause / Step / Freeze    |
| Page+ / Stop      | Stop / Hold              |
| Page+ / Stop      | +  Shift + CH+ /         |
| Page- / Zoom      | Zoom / Size              |
| Page- / Zoom      | +  Shift + CH- /         |
| [≡i] / I<<        | I<< / Preset-            |
| [≡□] / >>I        | >>I / Preset+            |
| [≡?] / <<<        | <<< / Tune-              |
| [≡●] / >>>        | >>> / Tune+              |
| EPG / D.Menu      | D.Menu / Top             |
| EPG / D.Menu      | Guide / EPG / -/--       |
| FAV / D.Title     | +  Shift + Sound / Title |
| FAV / D.Title     | Fav / Marker / PC        |
| FAV- / D.Disp     | Display / Media          |
| FAV- / D.Disp     | +  Shift + Down          |

| Original     | Substitut                     |
|--------------|-------------------------------|
| FAV+ / Goto  | +  Shift + Up                 |
| FAV+ / Goto  | +  Shift + Text /             |
| Red / D.Prog | TV/Radio /                    |
| Red / D.Prog | Red / Netflix / Search        |
| Green / Step | +  Shift + Pause / Step /     |
| Green / Step | Green / APP / Repeat          |
| Yellow / RPT | +  Shift + Green / APP /      |
| Yellow / RPT | Yellow / YouTube / Repeat     |
| Blue / A-B   | +  Shift + Yellow / YouTube / |
| Blue / A-B   | Blue / Prime Video / Random   |
| List / Angle | +  Shift + Info / Angle       |
| List / Angle | Smart / List                  |
| SUB-T        | Subtitle / EQ                 |
| Aspect       | +  Shift + Picture / Format   |
| Rec          | Rec / Rec Mode                |

