

 









 
 
 

 












Original	Substitut	Original	Substitut
 Power	 Power	 TV/AV	 AV / Input / RDS
 Open/Close	 Eject / Surround	 P+	 CH+ / Page+
 Scan	 Display / Media	 TV/DVD	 Smart / List
 Swap	 Back / Return	 V-	 Vol-
 Call	 Shift + OK	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 V+	 Vol+
 1	 1	 Exit	 Exit / Cancel / Clear
 2	 2	 P-	 CH- / Page-
 3	 3	 P.STD	 Picture / Format
 4	 4	 Red/Picture	 Shift + Picture / Format
 5	 5	 Red/Picture	 Red / Netflix / Search
 6	 6	 Green/Sound	 Sound / Title
 7	 7	 Green/Sound	 Green / APP / Repeat
 8	 8	 Yellow/Time	 Yellow / YouTube / Repeat
 9	 9	 Blue/Function	 Blue / Prime Video / Random
 0	 0	 <<	 << / Tune-
 -/--	 Guide / EPG / -/--	 >>	 >> / Tune+





	Original	Substitut		Original	Substitut
PREV	<<	PRESET- I<< / Preset-			
NEXT	>>	PRESET+ >>  / Preset+			
TUNE	Tune	SHIFT + PROGRAM TV/RADIO / Program			
Up	Up	Up			
Down	Down	Down			
PROGRAM	Program	PROGRAM TV/RADIO /			
ZOOM	Zoom	SIZE Zoom / Size			
D.CALL	D.Call	ANGLE Info / Angle			
[◆]	[◆]	SHIFT + SIZE Shift + Zoom /			
[-]	[-]	TOP MENU D.Menu / Top			
[/=]	[/=]	SHIFT + GOTO Shift + Text /			
[=]	[=]	GOTO Text / Goto			
[X]	[X]	SHIFT + CLEAR EXIT / Cancel / Clear			
[?]	[?]	OPT-TOOLS Setup / OPT /			
[+]	[+]	EQ Subtitle / EQ			
Timer	Timer	TIMER Sleep / Timer			
>	>	Right			










 
 
 
 

 
 
 

 
 


 

 
 












Original	Substitut
Power	Power
Open / Close	Eject / Surround
Scan	Shift + Setup / OPT / Tools
Swap	Back / Return
Call	Smart / List
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide / EPG / -/--

Original	Substitut
TV/AV	AV / Input / RDS
I-II	Shift + Audio / Lang I/II
P+	CH+ / Page+
TV/DVD	Shift + 2
TV/DVD	Shift + 1
V-	Vol-
Menu	Menu / Home
V+	Vol+
Exit	Exit / Cancel / Clear
P-	CH- / Page-
P.Std	Picture / Format
Red / Picture	Red / Netflix / Search
Red / Picture	Shift + Picture / Format
Green / Sound	Green / APP / Repeat
Green / Sound	Shift + Sound / Title
Yellow / Time	Yellow / YouTube / Repeat
Yellow / Time	Sleep / Timer









Original	Substitut
 Blue / Function	 Blue / Prime Video / Random
 Rev	 << / Tune-
 Fwd	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Setup	 Setup / OPT /
 Pause / Step	 Pause / Step / Freeze
 White / Tune	 Display / Media
 D.Menu	 D.Menu / Top
 Up	 Up
 Repeat	 Shift + Green / APP /
 A-B	 Shift + Yellow / YouTube /
 Left	 Left
 Play / Enter	 Play / Slow
 Play / Enter	 OK
 Right	 Right

Original	Substitut
 Slow	 Shift + Play /
 Angle	 Info / Angle
 Down	 Down
 Title / PBC	 Sound / Title
 Search	 Shift + Red / Netflix /
 Audio	 Audio / Lang I/II
 Program	 TV/Radio /
 Zoom	 Zoom / Size
 D.Call	 Shift + Smart / List
 10+	 Shift + Guide / EPG / -/-
 Caption	 Subtitle / EQ
 Hold	 Shift + Stop /
 [-]	 Shift + TV/Radio / Program
 Mix	 Shift + Text /
 Text	 Text / Goto
 [X]	 Shift + Exit / Cancel / Clear
 Reveal	 Shift + Sleep / Timer





Original	Substitit	Original	Substitit
	Size 		
	Subcode 		
	> 		

