



Original	Substitut
Standby	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
CH List	Smart / List
0	0
Recall / Mouse	Back / Return
Aspect	Shift + Picture / Format
Sleep	Sleep / Timer
Audio	Audio / Lang I/II

Original	Substitut
Pic. Mode	Picture / Format
S.Mode	Sound / Title
Up	Up
Left	Left
OK	OK
Right	Right
Exit	Exit / Cancel / Clear
Down	Down
Menu	Menu / Home
Source	AV / Input / RDS
Vol+	Vol+
TV / Radio	TV/Radio /
CH+	CH+ / Page+
Vol-	Vol-
Display	Display / Media
CH-	CH- / Page-
Red	Red / Netflix / Search





Original	Substitut
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Shift + HOME MENU / Menu /
	OPT-TOOLS SETUP / Setup / OPT /
	PC FAV MARKER / Fav / Marker / PC
	SHIFT + MEDIA DISPLAY / Shift + Display / Media
	TOP MENU D.MENU / D.Menu / Top
	SIZE ZOOM / Zoom / Size
	GOTO TEXT / Text / Goto
	EQ SUBTITLE / Subtitle / EQ
	SHIFT + HOLD / Shift + Stop /
	SLOW / Play / Slow
	STEP-FREEZE / Pause / Step / Freeze
	HOLD / Stop / Hold
	PRESET- / I<< / Preset-
	PRESET+ / >>I / Preset+

Original	Substitut
	<< / Tune-
	>> / Tune+

