




 
















 


Original	Substitut		
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Menu		Menu / Home
	0		0
	Exit		Exit / Cancel / Clear
	Up		Up
	CH+		CH+ / Page+
	Vol-		Vol-

Original	Substitut		
	Left		Left
	OK		OK
	Vol+		Vol+
	Right		Right
	CH-		CH- / Page-
	Down		Down
	EPG		Guide / EPG / -/--
	Red		Red / Netflix / Search
	TTX		Text / Goto
	Blue		Blue / Prime Video / Random
	Audio		Audio / Lang I/II
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Subtitle		Subtitle / EQ
	i		Info / Angle
	FAV		Fav / Marker / PC
	Tv/Radio		TV/Radio /





	Original	Substitut	
	Video	 +  Shift + 4	
	Scan	 AV / Input / RDS	
	Record	 Rec / Rec Mode	
	Device	 Smart / List	
	File	 Display / Media	
	Zoom	 Zoom / Size	
	Prev	 I<< / Preset-	
	Next	 >>I / Preset+	
	Roll	 Sound / Title	
	Play	 Play / Slow	
	Pause	 Pause / Step / Freeze	
	<<	 << / Tune-	
	>>	 >> / Tune+	

	Original	Substitut

