


 
 
 


 



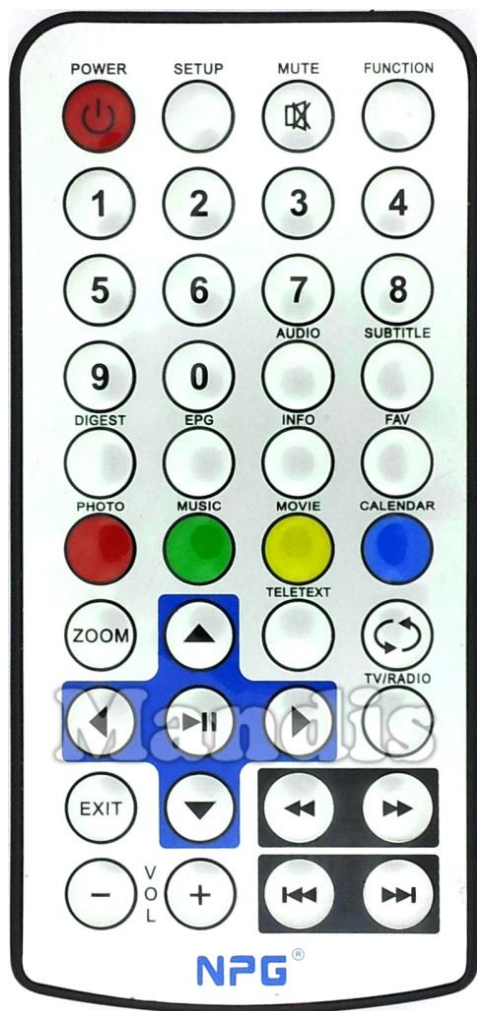


	Original	Substitut		Original	Substitut
	Power		Power		EPG
	Setup		Options		Info
	Mute		Mute		FAV
	Function		Menu		Red/Photo
	1		1		Green/Music
	2		2		Yellow/Movie
	3		3		Blue/Calendar
	4		4		Zoom
	5		5		Teletext
	6		6		Tv/Radio
	7		7		Recall
	8		8		Exit
	9		9		Up
	0		0		Down
	Audio		Dual		Right
	Subtitle		Subt		Left
	Digest		Smart		Play/Pause

	Original	Substitut		Original	Substitut
	Guide		Guide		TV
	Info		Info		DVD
	Pre Ch		Pre Ch		SAT
	Red		Red		AUX
	Green		Green		PLAY MODE
	Yellow		Yellow		PAUSE
	Blue		Blue		STOP
	Eject		Eject		DISC NAV
	Text		Text		SOUND
	TV/R		TV/R		AD
	Back		Back		SETTINGS
	Exit		Exit		LIST
	Up		Up		DUAL
	Down		Down		SUBT
	Right		Right		OPT
	Left		Left		PROG
	Ok		Ok		SEARCH
					PICTURE
					ECO
					SLEEP
					TV/R
					FORMAT
					3D
					E-MANUAL
					REPEAT
					ZOOM
					TIMER
					D.MENU
					TEXT
					UP
					AV





Original	Substitut	Original	Substitut
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	>>		>>
	<<		<<
	Vol+		Vol +
	Vol-		Vol -

