

 



 











 





 



 























 

























 

















Original	Substitut	Original	Substitut
 Power	 Power	 Slow	 Shift + Play /
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 1	 1	 EPG	 Guide / EPG / -/-
 2	 2	 Exit	 Exit / Cancel / Clear
 3	 3	 Zoom	 Zoom / Size
 4	 4	 Play	 Play / Slow
 5	 5	 Pause	 Pause / Step / Freeze
 6	 6	 <<	 << / Tune-
 7	 7	 >>	 >> / Tune+
 8	 8	 Rec	 Rec / Rec Mode
 9	 9	 Stop	 Stop / Hold
 0	 0	 UP	 Up
 Info	 Info / Angle	 DOWN	 Down
 FAV	 Fav / Marker / PC	 Right	 Right
 Page+	 Shift + CH+ /	 Left	 Left
 Page-	 Shift + CH- /	 OK	 OK
 Audio	 Audio / Lang I/II	 CH+	 CH+ / Page+





Original	Substitut	Original	Substitut
	CH-		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-
	TV/Radio		TV/Radio /
	Teletext		Text / Goto
	Subtitle		Subtitle / EQ
	Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Navi		Display / Media

