



| Original   | Substitut   | Original   | Substitut   |
|--|---|--|---|
|  Standby            |  Power               |  Up                   |  Up                    |
|  1/VCR/DVR          |  1                   |  Previous Menu/Muting |  Menu / Home           |
|  2/CBL/SAT          |  2                   |  Left/Playlist/Cat    |  Left                  |
|  3/Game/TV          |  3                   |  Enter                |  OK                    |
|  4/AUX              |  4                   |  Right/Playlist/Cat   |  Right                 |
|  5/Multi CH         |  5                   |  Setup                |  Setup / OPT /         |
|  6/DVD              |  6                   |  Down                 |  Down                  |
|  7/Tape             |  7                   |  Return               |  Back / Return         |
|  8/Tuner            |  8                   |  Pause/<              |  Pause / Step / Freeze |
|  9/CD               |  9                   |  Play                 |  Play / Slow           |
|  +10/10/-/-/D.Tun  |  Guide / EPG / -/-  |  Stop                |  Stop / Hold          |
|  0/11/Dimmer      |  0                 |  << / Tune-         |  << / Tune-          |
|  CLR/12/Sleep/Ent |  Fav / Marker / PC |  >> / Tune+         |  >> / Tune+          |
|  CH Disc          |  CH+ / Page+       |  Stereo             |  Sound / Title       |
|  CH Disc Album-   |  CH- / Page-       |  Surround           |  Eject / Surround    |
|  Vol+             |  Vol+              |  < Listening Mode   |  Shift + Left        |
|  Vol-             |  Vol-              |  Listening Mode >   |  Shift + Right       |

| Original   | Substitut   | Original   | Substitut   |
|--|---|--|---|
|  Standby            |  Power               |  Up                   |  Up                    |
|  1/VCR/DVR          |  1                   |  Previous Menu/Muting |  Menu / Home           |
|  2/CBL/SAT          |  2                   |  Left/Playlist/Cat    |  Left                  |
|  3/Game/TV          |  3                   |  Enter                |  OK                    |
|  4/AUX              |  4                   |  Right/Playlist/Cat   |  Right                 |
|  5/Multi CH         |  5                   |  Setup                |  Setup / OPT /         |
|  6/DVD              |  6                   |  Down                 |  Down                  |
|  7/Tape             |  7                   |  Return               |  Back / Return         |
|  8/Tuner            |  8                   |  Pause/<              |  Pause / Step / Freeze |
|  9/CD               |  9                   |  Play                 |  Play / Slow           |
|  +10/10/-/-/D.Tun  |  Guide / EPG / -/-  |  Stop                |  Stop / Hold          |
|  0/11/Dimmer      |  0                 |  << / Tune-         |  << / Tune-          |
|  CLR/12/Sleep/Ent |  Fav / Marker / PC |  >> / Tune+         |  >> / Tune+          |
|  CH Disc          |  CH+ / Page+       |  Stereo             |  Sound / Title       |
|  CH Disc Album-   |  CH- / Page-       |  Surround           |  Eject / Surround    |
|  Vol+             |  Vol+              |  < Listening Mode   |  Shift + Left        |
|  Vol-             |  Vol-              |  Listening Mode >   |  Shift + Right       |
































 

 

 

 

 

 

 

 

 



 





 

 



 







| Original |                 | Substitut |                             | Original |  | Substitut |  |
|----------|-----------------|-----------|-----------------------------|----------|--|-----------|--|
|          | Test Tone/Audio |           | Audio / Lang I/II           |          |  |           |  |
|          | CH Sel/Subtitle |           | Subtitle / EQ               |          |  |           |  |
|          | Random Level-   |           | Blue / Prime Video / Random |          |  |           |  |
|          | Repeat Level+   |           | Green / APP / Repeat        |          |  |           |  |
|          | Display         |           | Display / Media             |          |  |           |  |
|          | L.Night/DVD     |           | Sleep / Timer               |          |  |           |  |
|          | Cine FLTR/HDD   |           | TV/Radio /                  |          |  |           |  |
|          |                 |           |                             |          |  |           |  |
|          |                 |           |                             |          |  |           |  |
|          |                 |           |                             |          |  |           |  |
|          |                 |           |                             |          |  |           |  |
|          |                 |           |                             |          |  |           |  |
|          |                 |           |                             |          |  |           |  |
|          |                 |           |                             |          |  |           |  |
|          |                 |           |                             |          |  |           |  |
|          |                 |           |                             |          |  |           |  |
|          |                 |           |                             |          |  |           |  |
|          |                 |           |                             |          |  |           |  |
|          |                 |           |                             |          |  |           |  |
|          |                 |           |                             |          |  |           |  |
|          |                 |           |                             |          |  |           |  |





| Original  |                      | Substitut   |                   | Original  |                    | Substitut   |                       |
|---|----------------------|---|-------------------|---|--------------------|---|-----------------------|
|    | Standby              |    | Power             |    | Enter              |    | OK                    |
|    | 1/VCR/DVR            |    | 1                 |    | Right/Playlist/Cat |    | Right                 |
|    | 2/CBL/SAT            |    | 2                 |    | Setup              |    | Setup / OPT /         |
|    | 3/Game/TV            |    | 3                 |    | Down               |    | Down                  |
|    | 4/AUX                |    | 4                 |    | Return             |    | Back / Return         |
|    | 5/Multi CH           |    | 5                 |    | Pause/<            |    | Pause / Step / Freeze |
|    | 6/DVD                |    | 6                 |    | Play               |    | Play / Slow           |
|    | 7/Tape               |    | 7                 |    | Stop               |    | Stop / Hold           |
|    | 8/Tuner              |    | 8                 |    | <<                 |    | << / Tune-            |
|    | 9/CD                 |    | 9                 |    | >>                 |    | >> / Tune+            |
|   | +10/10/-/-/D.Tun     |   | Guide / EPG / -/- |   | <<                 |   | << / Preset-          |
|  | 0/11/Dimmer          |  | 0                 |  | >>                 |  | >>  / Preset+         |
|  | CLR/12/Sleep/Ent     |  | Fav / Marker / PC |  | Stereo             |  | Sound / Title         |
|  | Guide/Top            |  | D.Menu / Top      |  | Surround           |  | Eject / Surround      |
|  | Up                   |  | Up                |  | < Listening Mode   |  | CH- / Page-           |
|  | Previous Menu/Muting |  | Menu / Home       |  | > Listening Mode   |  | CH+ / Page+           |
|  | Left/Playlist/Cat    |  | Left              |  | Test Tone/Audio    |  | Audio / Lang I/II     |





| Original        | Substitut                   | Original | Substitut |
|-----------------|-----------------------------|----------|-----------|
| CH Sel/Subtitle | Smart / List                |          |           |
| Level-/Random   | Blue / Prime Video / Random |          |           |
| Level+/Repeat   | Green / APP / Repeat        |          |           |
| Display         | Display / Media             |          |           |
| Play Mode VCR   | AV / Input / RDS            |          |           |
| L.Night/DVD     | Sleep / Timer               |          |           |
| Cine FLTR/HDD   | TV/Radio /                  |          |           |
|                 |                             |          |           |
|                 |                             |          |           |
|                 |                             |          |           |
|                 |                             |          |           |
|                 |                             |          |           |
|                 |                             |          |           |
|                 |                             |          |           |
|                 |                             |          |           |
|                 |                             |          |           |
|                 |                             |          |           |
|                 |                             |          |           |
|                 |                             |          |           |
|                 |                             |          |           |
|                 |                             |          |           |
|                 |                             |          |           |
|                 |                             |          |           |
|                 |                             |          |           |



 



















 



 



 

 

 

 



 

 

 







| Original         | Substitut         | Original         | Substitut                   |
|------------------|-------------------|------------------|-----------------------------|
| Standby          | Power             | Pause / <        | Pause / Step / Freeze       |
| 1/VCR/DVR        | 1                 | Play             | Play / Slow                 |
| 2/CBL/SAT        | 2                 | Stop             | Stop / Hold                 |
| 3/Game/TV        | 3                 | <<               | << / Tune-                  |
| 4/AUX            | 4                 | >>               | >> / Tune+                  |
| 5/Multi CH       | 5                 | I<<              | I<< / Preset-               |
| 6/DVD            | 6                 | >>I              | >>I / Preset+               |
| 7/Tape           | 7                 | Stereo           | Audio / Lang I/II           |
| 8/Tuner          | 8                 | Surround         | Eject / Surround            |
| 9/CD             | 9                 | < Listening Mode | Left                        |
| +10/10/-/-/D.Tun | Guide / EPG / -/- | Listening Mode > | Right                       |
| 0/11/Dimmer      | 0                 | Level-/Random    | Blue / Prime Video / Random |
| CLR/12/Sleep/Ent | Fav / Marker / PC | Level+/Repeat    | Green / APP / Repeat        |
| Disc/Album       | CH+ / Page+       | Display          | Display / Media             |
| Disc/Album CH-   | CH- / Page-       |                  |                             |
| Vol+             | Vol+              |                  |                             |
| Vol-             | Vol-              |                  |                             |





| Original   | Substitut   | Original   | Substitut   |
|--|---|--|---|
|  Standby            |  Power                   |  <<               |  << / Tune-        |
|  1/VCR/DVR          |  1                       |  Stereo           |  Audio / Lang I/II |
|  2/CBL/SAT          |  2                       |  Surround         |  Eject / Surround  |
|  3/Game/TV          |  3                       |  < Listening Mode |  Left              |
|  4/AUX              |  4                       |  Listening Mode > |  Right             |
|  5/Multi CH         |  5                       |  Play Mode/VCR    |  OK                |
|  6/DVD              |  6                       |  L.Night/DVD      |  Sleep / Timer     |
|  7/Tape             |  7                       |  |   |
|  8/Tuner            |  8                       |  |   |
|  9/CD               |  9                       |  |   |
|  +10/+10/-/-/D.Tun |  Guide / EPG / -/-      |  |   |
|  0/11/Dimmer      |  0                     |  |   |
|  Disc/Album       |  CH+ / Page+           |  |   |
|  Disc/Album CH-   |  CH- / Page-           |  |   |
|  Pause/<          |  Pause / Step / Freeze |  |   |
|  Play             |  Play / Slow           |  |   |
|  Stop             |  Stop / Hold           |  |   |

