 

 

 






 







 

















 
 


 

 

 
 
 
 
 

 
 


 
 



 

 

 







Original	Substitut	Original	Substitut
 RCVR On	 Power	 RCVR Down	 Down
 RCVR Standby	 Shift + Power	 RCVR Angle / Level Down	 Format
 RCVR Return	 Back	 RCVR Subtitle / Level Up	 Subt
 RCVR Setup	 Options	 RCVR I<<	 I<<
 RCVR	 Ch +	 RCVR Play	 Play
 RCVR CH-/Disc-	 Ch -	 RCVR >>I	 >>I
 RCVR Vol+	 Vol +	 RCVR <<	 <<
 RCVR Vol-	 Vol -	 RCVR Stop	 Stop
 RCVR CH Sel / Top Menu	 Shift + Menu	 RCVR >>	 >>
 RCVR CH Sel / Top Menu	 D. Menu	 RCVR Rec /	 Rec
 RCVR Test / Menu	 Menu	 RCVR Play Rev.	 Pause
 RCVR Audio Sel / TV/VCR	 TV/R	 RCVR Input Sel. 1	 1
 RCVR Muting	 Mute	 RCVR Input Sel. 2	 2
 RCVR Up	 Up	 RCVR Input Sel. 3	 3
 RCVR Left	 Left	 RCVR Input Sel. 4	 4
 RCVR Enter	 Ok	 RCVR Input Sel. 5	 5
 RCVR Right	 Right	 RCVR Input Sel. 6	 6



TUN

 


 
 






















 







 



 

 

 

 

 

 

 
 
 







 


 


 


Original	Substitut
 RCVR Input Sel.	7 7
 RCVR Input Sel.	8 8
 RCVR Input Sel.	9 9
 RCVR Input Sel.	0 0
 RCVR Pure A	SHIFT + 1 Shift + 1
 RCVR Direct	SHIFT + 2 Shift + 2
 RCVR Stereo	SHIFT + 3 Shift + 3
 RCVR Surr.	SHIFT + 4 Shift + 4
 RCVR All St.	SHIFT + 5 Shift + 5
 RCVR DSP	SHIFT + 6 Shift + 6
 SP A	SHIFT + 7 Shift + 7
 SP B	SHIFT + 8 Shift + 8
 CINE FLTR	SHIFT + 9 Shift + 9
 RCVR Dimmer	SHIFT + 0 Shift + 0
 RCVR Display	INFO Info
 RCVR Display	GUIDE Guide
 RCVR Zone 2	PRE-CH Pre Ch

Original	Substitut

 


 
 
 

 
 

 

 

 
 
 






Original		Substitut		Original		Substitut	
	DVD On		Power		DVD Play		Play
	DVD Standby		Shift + Power		DVD >>I		>>I
	DVD Sleep		Sleep		DVD <<		<<
	DVD Return		Back		DVD Stop		Stop
	DVD Setup		Options		DVD >>		>>
	DVD Disc+		Ch +		DVD Random		Rec
	DVD Disc-		Ch -		DVD Pause		Pause
	DVD Vol+		Vol +		DVD Eject		Exit
	DVD Vol-		Vol -		DVD Input Sel.		1
	DVD CH Sel / Top Menu		Shift + Menu		DVD Input Sel. CD		2
	DVD CH Sel / Top Menu		D. Menu		DVD Input Sel. V1		3
	DVD Test /		Menu		DVD Input Sel. V2		4
	DVD Audio Sel / TV/VCR		TV/R		DVD Input Sel.		5
	Muting		Mute		DVD Input Sel.		6
	DVD Angle /		Format		DVD Input Sel. V3		7
	DVD Subtitle / Level+		Subt		DVD Input Sel. V4		8
	DVD I<<		I<<		DVD Input Sel. V5		9



 

 

 





 
 



 



 
 


 







 

 

 




















	Original		Substitut
	DVD Input Sel. PH		0
	DVD 1		Shift + 1
	DVD 2		Shift + 2
	DVD 3		Shift + 3
	DVD 4		Shift + 4
	DVD 5		Shift + 5
	DVD 6		Shift + 6
	DVD 7		Shift + 7
	DVD 8		Shift + 8
	DVD 9		Shift + 9
	DVD 0		Shift + 0
	DVD +10 / --/---		Guide
	DVD Search/Enter		Pre Ch

	Original		Substitut





Original		Substitut		Original		Substitut	
	On		Power		2		2
	Standby		Shift + Power		3		3
	Disc+		Ch +		4		4
	Vol+		Vol +		5		5
	Vol-		Vol -		6		6
	Muting		Mute		7		7
	Subtitle		Subt		8		8
	I<<		I<<		9		9
	Play		Play		0		0
	>>I		>>I		+10		Guide
	<<		<<				
	Stop		Stop				
	>>		>>				
	Pause		Pause				
	Random		Rec				
	Eject		Eject				
	1		1				

