


















Original	Substitut
	Power
	SD/HC
	Input TV
	Input AV
	Aspect
	Menu
	N
	Direct Tv Rec
	i
	Exit
	Viera Tools
	Viera Link
	Up
	Guide
	Left
	OK
	Right

Original	Substitut
	Power
	Shift + Display / Media
	Shift + AV / Input / RDS
	AV / Input / RDS
	Picture / Format
	Menu / Home
	Shift + Up
	D.Menu / Top
	Info / Angle
	Exit / Cancel / Clear
	Smart / List
	Display / Media
	Up
	Guide / EPG / -/-
	Left
	OK
	Right

Original	Substitut
	Option
	Down
	Return
	Red
	Green
	Yellow
	Blue
	Text
	[≡♦]/Sttl
	[≡i]/Index
	[≡+]/Hold
	1
	2
	3
	4
	5
	6

Original	Substitut
	Setup / OPT /
	Down
	Back / Return
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto
	Subtitle / EQ
	Shift + Info / Angle
	Shift + Stop /
	1
	2
	3
	4
	5
	6





Original	Substitut	Original	Substitut
7	7	7	7
8	8	8	8
9	9	9	9
	Mute		Mute / Dimmer
0	0	0	0
	OIO		Shift + Smart / List
	Vol+		Vol+
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	Power Down		Shift + Power
	Programme		Shift + CH- /
	Programme Up		Shift + CH+ /
	<</l<<		<< / Tune-
	Play		Play / Slow
	>>/>>l		>> / Tune+
	Stop		Stop / Hold

Original	Substitut	Original	Substitut
	Pause/Step		Pause / Step / Freeze
	Rec		Rec / Rec Mode

