



Original	Substitut	Original	Substitut
	Power		Power
	Menu		Menu
	Guide		Guide
	Input Tv		TV/R
	Input AV		AV
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Exit		Exit
	i		Info
	Option		Options
	Return/Back		Back
	Netflix		Media
	Home		Smart
	APPS	 + 	Shift + Media
	[+]/Aspect		3D

Original	Substitut	Original	Substitut
	[≡/◆]/STTL		Subt
	[≡]/Text		Text
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	?/Help		Dual
	Recall		Pre Ch
	1		1
	2		2
	3		3





Original		Substitut		Original		Substitut	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	Rec		Rec				
	>>		>>				
	<<		<<				
	>>		>>				
	<<		<<				

