



Original	Substitut
 POWER	 Power
 TV	 Shift + 1
 VCR / AUX	 Shift + 7
 VCR / AUX	 Shift + 4
 SLEEP	 Sleep / Timer
 TV / AV	 AV / Input / RDS
 TUNER / BAND	 Shift + 6
 DVD / CD	 Shift + 3
 DVD / CD	 Shift + 2
 1	 1
 2	 2
 3	 3
 CH +	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 CH -	 CH- / Page-

Original	Substitut
 7	 7
 8	 8
 9	 9
 VOL +	 Vol+
 Cancel	 Exit / Cancel / Clear
 0	 0
 ≥ 10 / -/-	 Guide / EPG / -/-
 VOL -	 Vol-
 SKIP PREV.	 I<< / Preset-
 SKIP NEXT	 >>I / Preset+
 SLOW/SEARCH	 << / Tune-
 SLOW/SEARCH	 >> / Tune+
 STOP	 Stop / Hold
 PAUSE	 Pause / Step / Freeze
 PLAY	 Play / Slow
 TOP MENU / DIR. NAV.	 D.Menu / Top
 UP	 Up





Original	Substitut
 MENU / PLAY LIST	 Menu / Home
 LEFT	 Left
 ENTER	 OK
 RIGHT	 Right
 DISPLAY / TV VOL-	 Display / Media
 DISPLAY / TV VOL-	 Shift + Vol-
 DOWN	 Down
 RETURN / TV	 Back / Return
 RETURN / TV	 Shift + Vol+
 SUBWOOFER	 Shift + Subtitle / EQ
 SFC	 Blue / Prime Video / Random
 C. FOCUS	 TV/Radio /
 SUPER SRND.	 Eject / Surround
 DOLBY PL. II	 Sound / Title
 Mix 2CH	 Picture / Format
 C. S. M.	 Red / Netflix / Search
 POSITION	 Yellow / YouTube / Repeat

Original	Substitut
 AUDIO	 Audio / Lang I/II
 ZOOM	 Zoom / Size
 SETUP	 Setup / OPT /
 MUTING	 Mute / Dimmer
 FL DISPLAY	 Shift + Display / Media
 PAGE	 Shift + CH+ /
 GROUP	 Shift + CH- /
 REPEAT	 Green / APP / Repeat
 PLAY MODE	 Info / Angle
 TEST	 Text / Goto
 CH. SELECT	 Smart / List
 QUICK REPLAY	 Shift + OK
 SUBTITLE	 Subtitle / EQ



MEMORY















Original	Substitut		
	Power		Power
	Power AV	+	Shift + Power
	Tv/AV		AV / Input / RDS
	1		1
	2		2
	3		3
	CH+		CH+ / Page+
	4		4
	5		5
	6		6
	CH-		CH- / Page-
	7		7
	8		8
	9		9
	0		0
	≥10 / -/--		Guide / EPG / -/--
	Tv Vol-		Vol-

Original	Substitut		
	Tv Vol+		Vol+





Original	Substitut
 Power	 Shift + Power
 Power AV	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ≥ 10 / -/-	 Guide / EPG / -/-
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

Original	Substitut
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow

