



Original	Substitut
	Power
	Muting
	Play
	Pause
	Stop
	<< Slow/Search
	Slow/Search >>
	I<</Skip Down
	>>I / Skip Up
	Subwoofer
	Audio
	Subtitle
	SFC
	OSD
	Timer
	TV
	Top Menu

Original	Substitut
	Power
	Mute / Dimmer
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Sound / Title
	Audio / Lang I/II
	Subtitle / EQ
	Eject / Surround
	Picture / Format
	Sleep / Timer
	TV/Radio /
	D.Menu / Top





	Original	Substitut		Substitut
	1		1	
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	-/-->10		Guide / EPG / -/--	
	0		0	
	Repeat		Green / APP / Repeat	
	A-B Repeat		Yellow / YouTube / Repeat	
	Power VCR		Shift + Power	
	Play Mode		Shift + Play /	
	Super Surround		Shift + Sound / Title	
	Audio Only		Shift + Audio / Lang I/II	

	Original	Substitut
	Dolby PL	
	FM Mode	
	D.MIX	
	Group	
	RDS	
	Center Focus	
	Position	
	DVD/CD	
	Tuner/Band	

