





 
 

 


 





 

 

 
 

 


 


 




 






 


 
 
 



 

 
















Original	Substitut	Original	Substitut
 Power	 Power	 Vol+	 Vol+
 Sleep	 Sleep / Timer	 Vol-	 Vol-
 PlayTimer	 Pause / Step / Freeze	 Mute	 Mute / Dimmer
 Clock/Timer	 Shift + Sleep / Timer	 Bluetooth	 Shift + 9
 1	 1	 CD/USB	 Red / Netflix / Search
 2	 2	 Radio/Ext-In	 Green / APP / Repeat
 3	 3	 I<<	 I<< / Preset-
 4	 4	 Play/Pause	 Play / Slow
 5	 5	 >>I	 >>I / Preset+
 6	 6	 <<	 << / Tune-
 7	 7	 Stop	 Stop / Hold
 8	 8	 >>	 >> / Tune+
 9	 9	 OK	 OK
 0	 0	 D.Bass	 Text / Goto
 DEL	 Exit / Cancel / Clear	 Sound	 Sound / Title
 +10	 Guide / EPG / EPG	 Preset EQ	 AV / Input / RDS
 Program	 TV/Radio /	 Display	 Display / Media

Program





Original	Substitut	Original	Substitut
 Dimmer	 +  Shift + Mute / Dimmer		
 Play Menu	 +  Shift + Display / Media		
 Setup	 Setup / OPT /		
 Radio Menu	 Menu / Home		
 Up Album	 Up		
 Down Album	 Down		
 Left	 Left		
 Right	 Right		

