

 

 
 
 




 


























Original	Substitut
	Power
	Guide / EPG / -/--
	Text / Goto
	AV / Input / RDS
	Menu / Home
	Picture / Format
	Shift + Display / Media
	Zoom / Size
	Info / Angle
	Exit / Cancel / Clear
	Display / Media
	Shift + Red / Netflix /
	Smart / List
	Up
	Down
	Left
	Right

Original	Substitut
	OK
	D.Menu / Top
	Back / Return
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Vol+
	Vol-
	Mute / Dimmer
	CH+ / Page+
	CH- / Page-
	1
	2
	3
	4
	5





Original		Substitut	
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/Radio /
	Recall		Shift + Back / Return
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Lang		Audio / Lang I/II
	Subt.		Subtitle / EQ

Original		Substitut	

