



Original	Substitut	Original	Substitut
	Power		Power
	Eject		Eject / Surround
	Bluetooth/Dock		9
	FM/CD		3
	Audio In/USB		AV / Input / RDS
	Up		Up
	Down		Down
	>>I		>>I / Preset+
	I<<		I<< / Preset-
	OK		OK
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Play/Pause		Play / Slow
	Menu		Menu / Home
	RDS/Display		Display / Media
	Repeat/Shuffle		Green / APP / Repeat

Original	Substitut	Original	Substitut
	Prog		TV/Radio /
	Sound		Sound / Title
	Clock		Sleep / Timer
	Sleep/Timer		Setup / OPT /

