














Original	Substitut		
	Power		Power
	ambilight		Display / Media
	Menu		Menu / Home
	Smart		Smart / List
	Sources/Pair		AV / Input / RDS
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		OK
	←		Back / Return
	Home		Shift + Menu /
	Tv Guide/List		Guide / EPG / -/--
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold

Original	Substitut		
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Netflix		Shift + Red / Netflix /
	prime video		Shift + Blue / Prime /
	Rakuten Tv		Shift + Green / APP /
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Exit/Tv		Exit / Cancel / Clear
	1		1
	2		2





	Original	Substitut	Original	Substitut
	3	3		
	4	4		
	5	5		
	6	6		
	7	7		
	8	8		
	9	9		
	0	0		
	Text	Text / Goto		
	Options/+	Setup / OPT /		

