



 

































Original	Substitut
 Power	 Power
 DVD	 Shift + 2
 Open / Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Return	 Back / Return
 0	 0
 Display	 Display / Media
 Disc Menu	 D.Menu / Top
 Up	 Up

Original	Substitut
 System Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 I<<	 I<< / Preset-
 Down	 Down
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause / Step	 Pause / Step / Freeze
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Angle	 Info / Angle
 Zoom	 Zoom / Size
 Repeat	 Green / APP / Repeat





Original

Substitut


















REPEAT A-B	Repeat A-B		Yellow / YouTube / Repeat
PROGRAM	Program		TV/Radio /
CLEAR	Clear		Exit / Cancel / Clear
TITLE	Title		Sound / Title
SHUFFLE	Shuffle		Blue / Prime Video / Random


















Original

Substitut





 





 









Original	Substitut
	Power
	TV / Video
	VCR
	Eject
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Display
	Up
	System Menu

Substitut	Original
Power	
Setup / OPT /	
Shift + 4	
Eject / Surround	
1	
2	
3	
4	
5	
6	
7	
8	
9	
0	
Display / Media	
Up	
Menu / Home	

Original	Substitut
	Left
	OK
	Right
	I<< / Preset-
	Down
	>>I / Preset+
	Stop / Hold
	Play / Slow
	Pause / Step / Freeze
	Marker
	Search
	Input
	Record
	Program
	Clear
	Title
	Child Lock

Substitut	Original
Left	
OK	
Right	
I<< / Preset-	
Down	
>>I / Preset+	
Stop / Hold	
Play / Slow	
Pause / Step / Freeze	
Marker	
Search	
Input	
Record	
Program	
Clear	
Title	
Zoom / Size	