





















































Original	Substitut	Original	Substitut
 Power	 Power	 Blue	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 1	 1	 Vol+	 Vol+
 2	 2	 Vol-	 Vol-
 3	 3	 CH+	 CH+ / Page+
 4	 4	 CH-	 CH- / Page-
 5	 5	 Audio	 Audio / Lang I/II
 6	 6	 Aspect	 Eject / Surround
 7	 7	 Display	 Display / Media
 8	 8	 Tv/Radio	 TV/Radio /
 9	 9	 Rec	 Rec / Rec Mode
 0	 0	 Up	 Up
 -/--	 Shift + Guide / EPG / -/--	 Left	 Left
 Recall	 Back / Return	 OK/CH List	 OK
 Red	 Red / Netflix / Search	 Right	 Right
 Green	 Green / APP / Repeat	 Down	 Down
 Yellow	 Yellow / YouTube / Repeat	 Menu	 Menu / Home

Original	Substitut	Original	Substitut
 Power	 Mute	 TV	 DVD
 Mute	 Shift	 SAT	 AUX
 1	 SLOW	 STEP-FREEZE	 HOLD
 2	 TUNE-	 TUNE+	 PRESET-
 3	 PRESET+	 TITLE	 LANG I/II
 4	 EQ	 SURROUND	 SOUND
 5	 AUDIO	 SUBTITLE	 FORMAT
 6	 TIMER	 PROGRAM	 PICTURE
 7	 GOTO	 RDS	 ZOOM
 8	 TEXT	 AV INPUT	 TOP MENU
 9	 HOME	 ANGLE	 D.MENU
 0	MENU	INFO	SETUP
 -/--	OK	RETURN	EXIT
 Recall	CLEAR	BACK	CANCEL
 Red	LIST	VOL+	SMART
 Green	CH PAGE	VOL-	MEDIA
 Yellow	TV	CH+	DISPLAY
	DVD	CH-	TV / RADIO
	CD - STB	Up	REC MODE
	VIDEO	Left	1
	TAPE	Right	2
	TUNER	Down	3
	AUX - HDD	TV	4
	USB	DVD	5
	BLUETOOTH	CD - STB	6
	HDMI - BAT	VIDEO	7
	FAV MARKER	TAPE	8
	NETFLIX	TUNER	9
	APP	AUX - HDD	0
	YouTube	USB	-/--
	REPEAT	BLUETOOTH	GUIDE EPG
	REPEAT A-B	HDMI - BAT	TV
		FAV MARKER	DVD
		NETFLIX	CD - STB
		APP	VIDEO
		YouTube	TAPE
		REPEAT	TUNER
		REPEAT A-B	AUX - HDD
			USB
			BLUETOOTH
			HDMI - BAT
			FAV MARKER
			NETFLIX
			APP
			YouTube
			REPEAT
			REPEAT A-B
			RANDOM





Original	Substitut
 Exit	 Exit / Cancel / Clear
 EPG	 Guide / EPG / -/--
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 Text	 Text / Goto
 PVR/Hold	 Setup / OPT /
 Size	 Zoom / Size
 FAV	 Fav / Marker / PC
 Play	 Play / Slow
 Pause/Timeshift	 Pause / Step / Freeze
 Stop/Auto	 Stop / Hold
 Reveal	 D.Menu / Top
 Subtitle	 Subtitle / EQ
 <</Nicam	 << / Tune-
 >>/Freeze	 >> / Tune+
 I<</Index	 I<< / Preset-

Original	Substitut
 >>I/Subpage	 >>I / Preset+

