



 







 



 



 



 











 





















 














Original	Substitut	Original	Substitut
 Power	 Power	 Jump	 Smart / List
 S.Mode	 Sound / Title	 .	 Display / Media
 MTS	 Text / Goto	 Mute	 Mute / Dimmer
 P.Mode	 Picture / Format	 Input	 AV / Input / RDS
 Caption	 Subtitle / EQ	 Vol+	 Vol+
 Sleep	 Sleep / Timer	 Vol-	 Vol-
 P.Size	 Zoom / Size	 CH+	 CH+ / Page+
 1	 1	 CH-	 CH- / Page-
 2	 2	 Guide	 Guide / EPG / -/-
 3	 3	 Exit	 Exit / Cancel / Clear
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Down	 Shift + Down
 7	 7	 Left	 Left
 8	 8	 OK	 OK
 9	 9	 Info	 Info / Angle
 0	 0	 Menu	 Menu / Home

Original	Substitut	Original	Substitut
 Power	 Mute / Dimmer	 SHIFT	 TV
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 PLAY	 PAUSE	 PRESET-	 PRESET+
 TUNE-	 TUNE+	 EQ	 SURROUND
 TITLE	 LANG III	 SOUND	 AUDIO
 FORMAT	 SIZE	 SUBTITLE	 TIMER
 PICTURE	 ZOOM	 SLEEP	 PROGRAM
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 MENU	 INFO
 CLEAR	 EXIT	 CANCEL	 RETURN
 VOL +	 SMART	 MEDIA	 CH PAGE +
 VOL -	 DISPLAY	 CH PAGE -	 TV
 TV	 DVD	 CD - STB	 VIDEO
 1	 2	 3	 TAPE
 4	 5	 6	 TUNER
 7	 8	 9	 AUX - HDD
 8	 9	 0	 USB
 9	 0	 FAV MARKER	 HDMI - BAT
 0	 GUIDE EPG	 SEARCH	 PC
 NETFLIX	 APP	 REPEAT	 REPEAT A-B
 YouTube	 RANDOM	 Prime Video	



