









Original	Substitut	Original	Substitut
Standby	Power	Pic.Mode	Picture / Format
Mute	Mute / Dimmer	S.Mode	Sound / Title
1	1	Up	Up
2	2	Left	Left
3	3	OK	OK
4	4	Right	Right
5	5	Exit	Exit / Cancel / Clear
6	6	Down	Down
7	7	Menu	Menu / Home
8	8	Source	AV / Input / RDS
9	9	Vol+	Vol+
CH.List	Smart / List	Tv/Radio	TV/Radio /
0	0	CH+	CH+ / Page+
Recall	Back / Return	Vol-	Vol-
Aspect	Shift + Picture / Format	Display	Display / Media
Sleep	Sleep / Timer	CH-	CH- / Page-
Audio	Audio / Lang I/II	Red	Red / Netflix / Search

Original	Substitut	Original	Substitut
Standby	Power	Pic.Mode	Picture / Format
Mute	Mute / Dimmer	S.Mode	Sound / Title
1	1	Up	Up
2	2	Left	Left
3	3	OK	OK
4	4	Right	Right
5	5	Exit	Exit / Cancel / Clear
6	6	Down	Down
7	7	Menu	Menu / Home
8	8	Source	AV / Input / RDS
9	9	Vol+	Vol+
CH.List	Smart / List	Tv/Radio	TV/Radio /
0	0	CH+	CH+ / Page+
Recall	Back / Return	Vol-	Vol-
Aspect	Shift + Picture / Format	Display	Display / Media
Sleep	Sleep / Timer	CH-	CH- / Page-
Audio	Audio / Lang I/II	Red	Red / Netflix / Search





Original	Substitut
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Rec	 Rec / Rec Mode
 Time Shift	 D.Menu / Top
 Timer	 Shift + Sleep / Timer
 Rec List	 Shift + Rec / Rec Mode
 Index	 Info / Angle
 Reveal	 Setup / OPT /
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 Hold	 Shift + Stop /
 Play	 Play / Slow
 Size	 Zoom / Size
 Pause/Subpage	 Pause / Step / Freeze
 Stop	 Stop / Hold
 I<<	 I<< / Preset-

Original	Substitut
 >>	 >> / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

