

 



 

 

 

 

 

 



 

 

 

 

 









Original	Substitut
	 Power
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Option / Setup / OPT /
	 [I] / Info / Angle
	 Up
	 Left
	 OK
	 Right
	 Down
	 Menu/Browse / Menu / Home
	 [=] / Text / Goto
	 Vol+
	 P+ / CH+ / Page+
	 Vol-

Original	Substitut
	 Mute / Dimmer
	 P- / CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 AV / Input / RDS
	 0
	 P<P / Back / Return
	 Ambilight / Smart / List
	 Mode / D.Menu / Top
	 << / Tune-





Original	Substitut
 Stop/Cancel	 Stop / Hold
 Play	 Play / Slow
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 [i+]	 Display / Media
 [112]	 Picture / Format
 FAV	 Fav / Marker / PC

Original	Substitut

