





Original	Substitut
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 CH.List	 Smart / List
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Substitut
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 Vol+	 Vol+
 Audio	 Audio / Lang I/II
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Rec.List	 Fav / Marker / PC
 CH-	 CH- / Page-
 Rec	 Rec / Rec Mode
 Timer	 Shift + Sleep / Timer





 









Original	Substitut
 Timeshift	 Setup / OPT /
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I / Sub.Pg	 >>I / Preset+
 Stop / Hold	 Stop / Hold
 Play/Pause / Size	 Pause / Step / Freeze
 Play/Pause / Size	 Play / Slow
 Index	 Info / Angle
 Subtitle	 Subtitle / EQ
 TV/Radio	 TV/Radio /
 Aspect	 Zoom / Size
 Reveal	 D.Menu / Top
 Text	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Substitut
 Blue	 Blue / Prime Video / Random





Original	Substitut
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 CH.List	 Smart / List
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Substitut
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 Vol+	 Vol+
 Audio	 Audio / Lang I/II
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Rec List	 Fav / Marker / PC
 CH-	 CH- / Page-
 Rec	 Rec / Rec Mode
 Timer	 Shift + Sleep / Timer



