










 



 


















 




 







 
 
 

 

 





 
 






 




Original	Substitut	Original	Substitut
 Power	 Power	 Vol+	 Vol +
 Mute	 Mute	 Vol-	 Vol -
 1	 1	 OK	 Ok
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 Menu	 Menu
 7	 7	 Exit	 Exit
 8	 8	 Sleep	 Sleep
 9	 9	 Aspect	 Format
 0	 0	 Rec	 Rec
 Recall	 Pre Ch	 Red/DVD-Setup	 Red
 PR.List	 List	 Green/Repeat	 Green
 Source	 AV	 Yellow/Languag	 Yellow
 CH+	 Ch +	 Blue/DVD-Menu	 Blue
 CH-	 Ch -	 Title/PC Auto	 Options

Original	Substitut	Original	Substitut
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 TV	 DVD	 DVD
 SAT	 SAT	 AUX	 AUX
 PLAY MODE	 PLAY MODE	 REC MODE	 REC MODE
 FF	 FF	 Stop	 Stop
 II	 II	 Play	 Play
 RR	 RR	 FF	 FF
 DISC NAV	 DISC NAV	 SOUND	 SOUND
 LIST	 LIST	 AD	 AD
 PROG	 PROG	 SETTINGS	 SETTINGS
 SLEEP	 SLEEP	 SUBT	 SUBT
 E-MANUAL	 E-MANUAL	 OPT	 OPT
 D.MENU	 D.MENU	 ECO	 ECO
 REPEAT	 REPEAT	 3D	 3D
 ZOOM	 ZOOM	 TIMER	 TIMER
 TEXT	 TEXT	 AV	 AV
 TOP MENU	 TOP MENU	 INFO	 INFO
 MENU	 MENU	 OK	 OK
 EXIT	 EXIT	 Left	 Left
 CLEAR	 CLEAR	 Right	 Right
 RETURN	 RETURN	 Up	 Up
 BACK	 BACK	 Down	 Down
 HOME	 HOME	 SMART	 SMART
 VOL+	 VOL+	 MEDIA	 MEDIA
 CH-	 CH-	 CH+	 CH+
 1	 1	 2	 2
 2	 2	 3	 3
 3	 3	 4	 4
 4	 4	 5	 5
 5	 5	 6	 6
 6	 6	 7	 7
 7	 7	 8	 8
 8	 8	 9	 9
 9	 9	 0	 0
0	0	GUIDE	GUIDE
GUIDE	GUIDE	PRE-CH	PRE-CH
A	A	FAV	FAV
B	B	A	A
C	C	B	B
D	D	C	C
MUTE	MUTE	D	D
SHIFT	SHIFT	SETTINGS	SETTINGS
TV	TV	OPT	OPT
DVD	DVD	MUTE	MUTE
SAT	SAT	SHIFT	SHIFT
AUX	AUX	TV	TV
PLAY MODE	PLAY MODE	DVD	DVD
REC MODE	REC MODE	SAT	SAT
FF	FF	AUX	AUX
II	II	PLAY MODE	PLAY MODE
RR	RR	REC MODE	REC MODE
DISC NAV	DISC NAV	FF	FF
LIST	LIST	II	II
PROG	PROG	RR	RR
SLEEP	SLEEP	DISC NAV	DISC NAV
E-MANUAL	E-MANUAL	LIST	LIST
D.MENU	D.MENU	PROG	PROG
REPEAT	REPEAT	SLEEP	SLEEP
ZOOM	ZOOM	E-MANUAL	E-MANUAL
TEXT	TEXT	D.MENU	D.MENU
TOP MENU	TOP MENU	REPEAT	REPEAT
MENU	MENU	ZOOM	ZOOM
EXIT	EXIT	TEXT	TEXT
CLEAR	CLEAR	TOP MENU	TOP MENU
RETURN	RETURN	MENU	MENU
BACK			

