
 


 













 









 













Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	FAV		Fav / Marker / PC

Original	Substitut	Original	Substitut
	Vol+		Vol+
	MTS I/II		Audio / Lang I/II
	CH+		CH+ / Page+
	Vol-		Vol-
	Sub-T		Subtitle / EQ
	CH-		CH- / Page-
	Aspect		Zoom / Size
	Freeze		Shift + Pause / Step /
	Sleep		Sleep / Timer
	Source		AV / Input / RDS
	Up		Up
	Display		Display / Media
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down





Original		Substitut		Original		Substitut	
	Exit		Exit / Cancel / Clear		Rec		Rec / Rec Mode
	Red		Red / Netflix / Search		EPG		Guide / EPG / -/-
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	<< / Text/CC		<< / Tune-				
	<< / Text/CC		Text / Goto				
	Play/Pause /		Pause / Step / Freeze				
	Play/Pause /		Play / Slow				
	>> / Reveal		>> / Tune+				
	I<< / Hold		I<< / Preset-				
	>>I / Size		>>I / Preset+				
	Stop / Index		Stop / Hold				
	Root		Setup / OPT /				
	Repeat	+	Shift + Green / APP /				
	List		Smart / List				
	T.Shift		D.Menu / Top				

