



 

















 
 



















Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	<<		<< / Preset-
	>>		>> / Preset+
	EQ		Subtitle / EQ
	Zoom		Zoom / Size
	TV-Mode		TV/Radio /
	Setup		Setup / OPT /
	L/R		Text / Goto
	Input		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Reset		Exit / Cancel / Clear
	Down		Down
	Return		Back / Return
	Vol+		Vol+
	Treb+		CH+ / Page+
	Vol-		Vol-
	OSD		Display / Media
	Treb-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Original	Substitut
A1	
A2	
B1	
B2	
C1	
C2	
D1	

Original	Substitut
D2	
E1	
E2	
E3	
E4	

