 
 
 
 
 

 
 

 

 





Original	Substitut	Original	Substitut
	Power		Power
	Info		Info / Angle
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	O)/I-II/Audio		Audio / Lang I/II
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear

Original	Substitut	Original	Substitut
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	CH+		CH+ / Page+
	Index		Display / Media
	Vol+		Vol+
	CH-		CH- / Page-
	List/Repeat		Smart / List
	Vol-		Vol-
	♥/Title		Fav / Marker / PC
	Sleep/Menu		Sleep / Timer
	EPG/Setup		Guide / EPG / -/-
	Recall		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-





Original	Substitut	Original	Substitut
Green	Green / APP / Repeat		
>>	>> / Tune+		
Yellow	Yellow / YouTube / Repeat		
I<<	I<< / Preset-		
Blue	Blue / Prime Video / Random		
>>	>>  / Preset+		
[=]	Text / Goto		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
[=+]	Picture / Format		
Stop/Still	Stop / Hold		
Radio/Open/Close	TV/Radio /		
[=◆]/[++]	Zoom / Size		
[=x]	Setup / OPT /		
[=o]/Subtitle	Subtitle / EQ		
DMP	D.Menu / Top		
Rec	Rec / Rec Mode		

