




 






Original	Substitut	Original	Substitut
	Power		Power
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Info		Info / Angle
	0		0
	Guide		Guide / EPG / -/-
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

Original	Substitut	Original	Substitut
	Vol-		Vol-
	Menu		Menu / Home
	P-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	I<<		I<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>>		>>  / Preset+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow





Original	Substitut
	Pause / Step / Freeze
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Smart / List
	Display / Media
	Shift + 2
	TV/Radio /
	Audio / Lang I/II
	Subtitle / EQ
	Text / Goto
	Setup / OPT /

Original	Substitut

