 

 

 

 

 
 
 



 


 

 


 






Original	Substitut	Original	Substitut
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TTX/MIX		Text / Goto
	0		0
	PRE-CH		Fav / Marker / PC
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+

Original	Substitut	Original	Substitut
	Vol-		Vol-
	CH List		Smart / List
	CH-		CH- / Page-
	Sports		TV/Radio /
	Home		Menu / Home
	Guide		Guide / EPG / -/--
	Extra		Picture / Format
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





	Original	Substitut	Original	Substitut
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		
	Settings	Setup / OPT /		
	AD/Subt.	Subtitle / EQ		
	Rec	Rec / Rec Mode		
	Stop	Stop / Hold		
	<</ <<	<< / Tune-		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	>>/>>	>> / Tune+		

