







 




















 








 


 
 


 




 




 







 









Original	Substitut	Original	Substitut
 Power	 Power	 Guide	 Guide
 Source	 AV	 Tools	 Options
 1	 1	 Smart Hub	 Smart
 2	 2	 Info	 Info
 3	 3	 Return	 Back
 4	 4	 Exit	 Exit
 5	 5	 Enter	 Ok
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Red	 Red
 TTX/MIX	 Text	 Green	 Green
 PRE-CH	 Pre Ch	 Yellow	 Yellow
 Mute	 Mute	 Blue	 Blue
 CH List	 List	 Social Tv	 Media
 Menu	 Menu	 3D	 3D

Original	Substitut	Original	Substitut
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 TV	 DVD
 STOP	 STOP	 LEFT	 LEFT
 LEFT	 LEFT	 RIGHT	 RIGHT
 RIGHT	 RIGHT	 STOP	 STOP
 STOP	 STOP	 DISC NAV LIST	 SOUND
 DISC NAV LIST	 SOUND	 AD	 SETTINGS
 SOUND	 SETTINGS	 DUAL	 SUBT
 DUAL	 SUBT	 PICTURE	 ECO
 PICTURE	 ECO	 SLEEP	 TV/R
 SLEEP	 TV/R	 FORMAT	 3D
 TV/R	 3D	 E-MANUAL	 REPEAT
 E-MANUAL	 REPEAT	 D.MENU	 TEXT
 D.MENU	 TEXT	 ZOOM	 TIMER
 ZOOM	 TIMER	 TOP MENU	 DISPLAY INFO
 TOP MENU	 DISPLAY INFO	 MENU	 OK
 MENU	 OK	 UP	 UP
 UP	 UP	 DOWN	 DOWN
 DOWN	 DOWN	 LEFT	 LEFT
 LEFT	 LEFT	RIGHT	RIGHT
RIGHT	RIGHT	HOME	SMART
HOME	SMART	APP	CH
APP	CH	MEDIA	MEDIA
MEDIA	MEDIA	1	2
1	2	3	4
3	4	5	6
5	6	7	8
7	8	9	0
9	0	GUIDE	PRE-CH
GUIDE	PRE-CH	A	B
A	B	C	D
C	D	Mandis SHOP	Mandis SHOP
Mandis SHOP	Mandis SHOP	www.mandis.tv	www.mandis.tv



