 










 



 

 

 
 

 
 


 
 


 
 



 
 
 

 




 


 
 
 





 


 

 











Original	Substitut	Original	Substitut
 Power	 Power	 P+	 Ch +
 Source	 AV	 P-	 Ch -
 1	 1	 CH List	 List
 2	 2	 Smart Hub	 Smart
 3	 3	 Menu	 Menu
 4	 4	 Search	 TV/R
 5	 5	 Tools	 Options
 6	 6	 Info	 Info
 7	 7	 Return	 Back
 8	 8	 Exit	 Exit
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 TTX/MIX	 Text	 Right	 Right
 PRE-CH	 Pre Ch	 Left	 Left
 Vol+	 Vol +	 Enter	 Ok
 Vol-	 Vol -	 Red	 Red
 Mute	 Mute	 Green	 Green





Original	Substitut	Original	Substitut
Yellow	Yellow		
Blue	Blue		
Social TV	Media		
HDMI	Subt		
3D	3D		
E-Manual	D. Menu		
P.Size	Format		
SRS	Dual		
<<<	<<<		
I<<<	I<<<		
Pause	Pause		
>>>	>>>		
>>>I	>>>I		
Rec	Rec		
Play	Play		
Stop	Stop		

