
 








 
 
 
 

 





 
 
 
 




	Original	Substitut		Original	Substitut
	Power		Power		>>
	Source		AV		<<
	Open/Close		Eject		>>
	Sleep		Sleep		Stop
	1		1		Play
	2		2		Pause
	3		3		Vol +
	4		4		Vol -
	5		5		Mute
	6		6		Repeat
	7		7		Tuning+
	8		8		Tuning-
	9		9		Disc Menu
	0		0		Menu
	Dolby PL		Dual		Title Menu
	DSP/EQ		Guide		Tools
	I<<		I<<		Info





Original	Substitut	Original	Substitut
 Return	 Back		
 Exit	 Exit		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 Enter	 Ok		
 Red	 Red		
 Green/Tuner	 Green		
 Yellow/MO/ST	 Yellow		
 Blue/CD Ripping	 Blue		
 Dimmer	 Subt		
 S.Vol	 Format		
 P.Bass/Audio Upscale	 3D		

Original	Substitut

 




	Original	Substitut		Original	Substitut
	Power		Power		Pause
	Function Tv		AV		Vol +
	Sleep		Sleep		Vol -
	1		1		Mute
	2		2		Ch +
	3		3		Ch -
	4		4		Menu
	5		5		Options
	6		6		Info
	7		7		Back
	8		8		Exit
	9		9		Up
	0		0		Down
	<<		<<		Right
	>>		>>		Left
	Stop		Stop		Ok
	Play		Play		Red





	Original	Substitut		Original	Substitut
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		

