



Original	Substitut
 Standby / On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 IPC	 Red
 Audio	 Dual
 Select DVD	 Smart
 Select VCR	 Media
 Input Select	 AV
 TRK. +	 Ch +

Original	Substitut
 TRK. -	 Ch -
 Open / Close	 Eject
 Timer Rec	 Shift + AV
 I<<	 I<<
 F.Adv / Skip	 3D
 Marker	 Pre Ch
 >>I	 >>I
 <<	 <<
 Stop	 Stop
 Play/Pause	 Play
 >>	 >>
 Title List / Disc Menu	 D. Menu
 Menu	 Menu
 Anykey	 Green
 Play List / Title Menu	 List
 Up	 Up
 Left	 Left





	Original	Substitut		Original	Substitut
	OK		Ok		
	Right		Right		
	Down		Down		
	Return		Back		
	Clear		Exit		
	Info		Info		
	TV / VCR		TV/R		
	Subtitle		Subt		
	Rec Speed		Shift + Rec		
	Rec		Rec		
	Copy DVD		Shift + Smart		
	Copy VCR		Shift + Media		
	Rec Pause		Pause		
	PIP		Yellow		
	Time Slip		Sleep		

	Original	Substitut





Original	Substitut
 TV Standby/On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 Prog. +	 Ch +
 Prog. -	 Ch -

Original	Substitut

