



Original	Substitut	Original	Substitut
 Power	 Power	 Vol+	 Vol +
 TV/VCR - DVD	 Smart	 Vol-	 Vol -
 1	 1	 P/TRK+	 Ch +
 2	 2	 P/TRK-	 Ch -
 3	 3	 Slow+	 Shift + Ch +
 4	 4	 Slow-	 Shift + Ch -
 5	 5	 << / Index	 <<
 6	 6	 S.Mode	 Shift + Dual
 7	 7	 P.Mode	 Format
 8	 8	 >> / Mix	 >>
 9	 9	 I<<	 I<<
 0	 0	 >>I	 >>I
 -/--	 GUIDE	 Stop	 Stop
 Mute	 Mute	 Play / Pause	 Play
 I-II Audio	 Dual	 Play / Pause	 Pause
 TV/Text	 Text	 Red / Menu	 Red
 Input	 AV	 Red / Menu	 Menu

Original	Substitut	Original	Substitut
 Vol+	 Vol +	 Vol-	 Vol -
 P/TRK+	 Ch +	 P/TRK-	 Ch -
 Slow+	 Shift + Ch +	 Slow-	 Shift + Ch -
 << / Index	 <<	 S.Mode	 Shift + Dual
 P.Mode	 Format	 >> / Mix	 >>
 I<<	 I<<	 >>I	 >>I
 Stop	 Stop	 Play / Pause	 Play
 Play / Pause	 Pause	 Red / Menu	 Red
 Red / Menu	 Menu		





Original	Substitut
Green / DVD	Green
Green / DVD	D. Menu
Yellow / P.Size	Yellow
Blue / Info	Blue
Blue / Info	Info
	Eject
Rec / Return	Rec
Rec / Return	Back
	Pre Ch
	+  Shift + Pause
	Sleep
	Media

Original	Substitut
	Exit
	3D
	+  Shift + Text
	TV/R
	Options
	+  Shift + Eject
	Subt

