






 



 















 












 


 





 

 










 





 

 
 
 




 



 










 
 

 




 
 






Original	Substitut	Original	Substitut
 Power	 Power	 >>	 >>
 Input	 AV	 V.Menu	 D. Menu
 1	 1	 Mute	 Mute
 2	 2	 P+	 Ch +
 3	 3	 P+	 Up
 4	 4	 P-	 Ch -
 5	 5	 P-	 Down
 6	 6	 Vol+	 Right
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Left
 9	 9	 Vol-	 Vol -
 0	 0	 Menu	 Menu
 -/-	 GUIDE	 Display	 Info
 Pre CH	 Pre Ch	 P.STD	 3D
 <<	 <<	 Rec	 Rec
 Stop	 Stop	 Eject	 Eject
 Play	 Play	 Pause / P/S	 Pause

Original	Substitut	Original	Substitut
 MUTE	 SHIFT	 TV	 AUX
 TV	 DVD	 SAT	 REC MODE
 DUAL	 SUBT	 OPT	 ECO
 REPEAT	 ZOOM	 TIMER	 AV
 MENU	 INFO	 OK	 BACK
 HOME	 SMART	 CH +	 CH -
 APP	 MEDIA	 >>	 >>
 GUIDE	 PRE-CH	 <<	 <<
 A	 B	 C	 D



