













































 



Original	Substitut	Original	Substitut
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text / Goto
	PRE-CH		Fav / Marker / PC
	Mute		Mute / Dimmer
	CH LIST		Smart / List
	Vol+		Vol+

Original	Substitut	Original	Substitut
	Vol-		Vol-
	Ch+		CH+ / Page+
	Ch-		CH- / Page-
	Settings		Setup / OPT /
	Home		Menu / Home
	Guide		Guide / EPG / -/-
	Info		Info / Angle
	E-Manual		D.Menu / Top
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Enter		OK
	Return		Back / Return
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Original	Substitut
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Pic Size	 Zoom / Size
 Picture	 Picture / Format
 Ad/Subt.	 Subtitle / EQ
 Stop	 Stop / Hold
 <</I<<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>/>>I	 >> / Tune+

Original	Substitut

